


**INSTALLATION
AND OPERATING
MANUAL**

MASTERYS BC+

10-40 kVA

EN

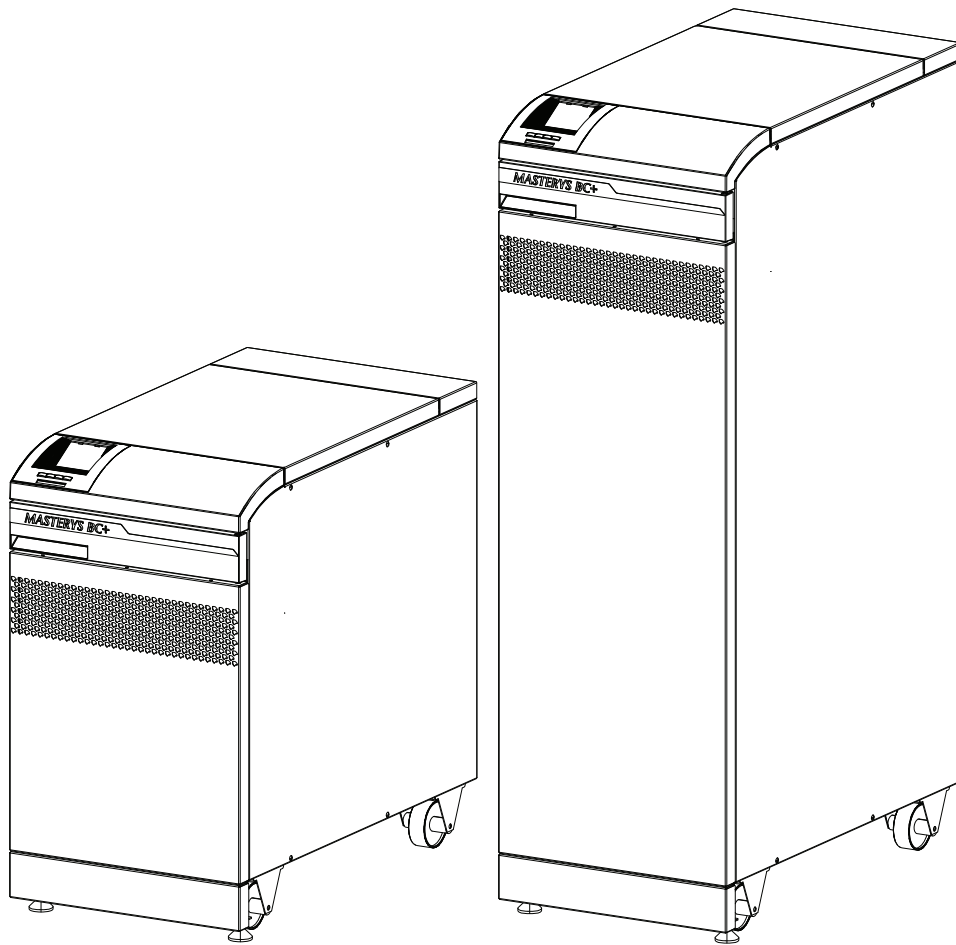

www.socomec.com

socomec
Innovative Power Solutions

AVAILABLE INSTALLATION TUTORING MOBILE APP

Discover **eWIRE**



Free download from



Ask your Socomec dealer for your activation code. Visit us at www.socomec.com for more info. (tool page).

This Application is meant to support the User when installing the relevant SOCOMEC products in tutoring the installation step by step. The Application shall in no way substitute the installation and user manual provided with this SOCOMEC product, which remains the sole accurate instructions in terms of safety, handling, connection and use of SOCOMEC products.

CONTENTS

1. CERTIFICATE AND CONDITIONS OF WARRANTY	5
2. SAFETY STANDARDS	6
2.1 DESCRIPTION OF SYMBOLS	8
3. ENVIRONMENTAL REQUIREMENTS AND HANDLING	9
3.1 ENVIRONMENTAL REQUIREMENTS	9
3.2 HANDLING	10
4. ELECTRICAL INSTALLATION	12
4.1 UPS SINGLE CONFIGURATION	12
4.2 UPS PARALLEL CONFIGURATION	13
4.3 ELECTRICAL REQUIREMENTS	14
4.3.1 BACKFEED PROTECTION	17
4.4 CABLE POSITIONING	20
5. OVERVIEW	21
5.1 FRONT VIEW	21
5.2 UPS SWITCHES	22
5.3 WIRING DIAGRAM	23
5.4 INTERNAL FRONT VIEW DETAILS	24
6. CONNECTIONS	25
6.1 EARTH CONNECTION	25
6.2 UPS CONNECTION	26
6.3 COMPLETION OF THE INSTALLATION	27
7. CONTROL PANEL	28
8. MENU	29
8.1 DISPLAY OVERVIEW (SYSTEM)	29
8.2 DISPLAY OVERVIEW (UNIT)	29
8.3 MENU TREE	33
8.4 MENU FUNCTION DESCRIPTIONS	35
8.4.1 ENTERING PASSWORDS	35
8.4.2 ALARMS MENU	35
8.4.3 STATUS MENU	35
8.4.4 EVENT LOG MENU	35
8.4.5 MEASUREMENTS MENU	35
8.4.6 CONTROLS MENU	35
8.4.7 USER PARAMETERS MENU	35
8.4.8 SERVICE MENU	36
9. OPERATING PROCEDURES	37
9.1 SWITCHING ON	37
9.2 SWITCHING OFF	37
9.3 BYPASS OPERATIONS	37
9.4 EXTENDED OUT OF SERVICE	38
9.5 EMERGENCY SHUTDOWN	38
10. OPERATING MODES	39
10.1 ON LINE MODE	39
10.2 HIGH EFFICIENCY MODE	39
10.3 CONVERTER MODE	40
10.4 OPERATION WITH MAINTENANCE BYPASS	40
10.5 OPERATION WITH MOTOR GENERATOR (GENSET)	40

11. STANDARD FEATURES AND OPTION	41
11.1 ADC+SL CARD	42
11.1.1 TEMPERATURE SENSOR	44
11.2 NET VISION CARD	45
11.2.1 EMD	45
11.3 ACS CARD	45
11.4 MODBUS TCP CARD	45
11.5 BACNET CARD	45
11.6 REMOTE TOUCHSCREEN DISPLAY	46
11.7 SOFTWARE OPTION	46
11.8 INTERNAL BACKFEED PROTECTION	46
11.9 EXTERNAL MAINTENANCE BYPASS	46
11.10 KIT FOR COMMON MAINS	47
11.11 KIT FOR SEPARATE MAINS	47
11.12 KIT FOR TN-C / NEUTRAL-GROUND CONNECTION	48
11.13 RAMP FOR UPS UNLOADING	48
11.14 KIT FOR FRONT AND LATERAL COVER	49
12. TROUBLESHOOTING	50
12.1 SYSTEM ALARMS	50
12.2 SYSTEM STATUS	51
13. PREVENTIVE MAINTENANCE	52
13.1 BATTERIES	52
13.2 FANS & CAPACITORS	53
14. SAFEGUARDING THE ENVIRONMENT	54
15. TECHNICAL SPECIFICATIONS	55

1. CERTIFICATE AND CONDITIONS OF WARRANTY

This SOCOMEC continuous power system is guaranteed against any manufacturing or material defects.

The warranty is valid for 12 (twelve) months from the commission date, provided activation is carried out by SOCOMEC personnel or personnel from a support centre authorised by SOCOMEC, and no more than 15 (fifteen) months from being shipped from SOCOMEC.

The warranty is valid throughout national territory. If the UPS is exported abroad, the warranty will only cover the parts used to repair faults.

The warranty is valid ex-works and covers labour and parts used to repair the faults.

The warranty shall not apply in the following cases:

- Failure due to unforeseen circumstances or force majeure (lightning, floods, etc.);
- Failure due to negligence or improper use (use outside limits: temperature, humidity, ventilation, electric power supply, applied load, batteries);
- Insufficient or inappropriate maintenance;
- When maintenance, repairs or modifications have not been carried out by SOCOMEC personnel, or personnel from a support centre authorised by SOCOMEC.
- If the battery has not been recharged in accordance with the terms indicated on the packaging and in the manual, in the event of long periods of storage or UPS inactivity.

SOCOMEC may, at its own discretion, opt for the repair of the product or the replacement of faulty or defective parts with new parts, or with used parts of equivalent quality to new parts with regard to function and performance.

Defective or faulty parts replaced free of charge must be made available to SOCOMEC, which becomes the sole owner.

Replacement or repair of parts, or any modifications to the product during the warranty period, will not extend the duration of the warranty.

SOCOMEC will not be responsible for damages under any circumstances (including, without limitations, damage for loss of earnings, interruption of activity, loss of information or other financial losses) arising from the use of the product.














These conditions are subject to Italian law. Any disputes fall under the jurisdiction of the Court of Vicenza.

SOCOMEC retains the full and exclusive ownership rights to this document. Only a personal entitlement to use the document for the application indicated by SOCOMEC is granted to the recipient of this document. The reproduction, modification, distribution of this document, either partially or wholly and in any manner, is strictly prohibited except upon Socomec's express prior written consent.

This document is not a specification. SOCOMEC reserves the right to make any changes to the information provided without prior notice.

2. SAFETY STANDARDS

This user manual specifies installation and maintenance procedures, technical data and safety instructions for SOCOMEC. For further information visit the Socomec website: www.socomec.com.

	NOTE! Any work carried out on the equipment must be performed by skilled, qualified technicians.
	DANGER! Failure to observe safety standards could result in fatal accidents or serious injury, and damage equipment or the environment.
	CAUTION! If the unit is found to be damaged externally or internally, or any of the accessories are damaged or missing, contact SOCOMEC. Do not operate the unit if it has suffered a violent mechanical shock of any kind.
	NOTE! Install the unit in accordance with clearances in order to prevent access to handling devices and guarantee sufficient ventilation (refer to 'Environmental requirements' chapter).
	NOTE! Only use accessories recommended or sold by the manufacturer.
	NOTE! When the equipment is transferred from a cold to a warm place wait approx. two hours before putting the unit into operation.
	NOTE! When carrying out electrical installation, all standards applicable specified by the IEC, in particular IEC 60364, and the electricity supplier must be observed. All national standards applicable to batteries must be observed. For further information refer to 'Technical specifications' chapter.
	WARNING! Connect the protective earth (PE) conductor before making any other connections.
	NOTE! The installer is responsible for implementing the backfeed protection with the use of AC input line isolation devices external to the UPS. Refer to 'Electrical requirements' chapter.
	DANGER! RISK OF ELECTRIC SHOCK! Before carrying out any operations on the unit (cleaning and maintenance performances, connection of appliances, etc.) disconnect all power sources.
	DANGER! RISK OF ELECTRIC SHOCK! After disconnecting all power sources wait approx. 5 minutes for the complete discharge of the unit.
	NOTE! The UPS may be powered from an IT distribution system with a neutral conductor.
	NOTE! Any use other than the specified purpose will be considered improper. The manufacturer/ supplier shall not be held responsible for damage resulting from this. Risk and responsibility lies with the system manager.

NOTE! The product you have chosen is designed for commercial and industrial use only. In order to be used for particular critical applications such as life support systems, medical applications, commercial transportation, nuclear facilities or any other application or system where product failure is likely to cause substantial harm to people or property, the products may have to be adapted. For such uses we would advise you to contact SOCOMEC beforehand to confirm the ability of these products to meet the requested level of safety, performance, reliability and compliance with applicable laws, regulations and specifications.



NOTE!


















This is a product for commercial and industrial application – installation restrictions or additional measures may be needed to prevent disturbances.

Safety requirements for secondary batteries and battery installations.



The installer is responsible for ensuring that the battery installation and their operating environment conform to national and international codes and safety standards.

2.1 DESCRIPTION OF SYMBOLS

Symbols	Description
	Protective earth terminal (PE).
	Authorized personnel only. Only qualified personnel are permitted to work on the batteries.
	Do not use naked flames or cause sparks in the vicinity of the accumulators.
	No smoking.
	Batteries charging! Batteries and related parts contain lead which is dangerous to health if ingested. Wash hands after handling!
	Accumulators are heavy! Use suitable transport and lifting equipment to work safely.
	Risk of electric shock! Connecting accumulators in series creates hazardous voltages.
	Risk of explosion! Avoid short circuits! Never place tools or metal objects on the accumulators.
	Corrosive liquids (electrolyte).
	Read the user instructions carefully. Read the user manual before performing any operations.
	Wear protective gloves
	Wear safety shoes.
	Wear protective goggles.
	In the event of accidents, improper use, failure or electrolyte leakage wear a protective apron.
	In the event of accidents, improper use, failure or electrolyte leakage wear a gas mask.
	In the event of contact with the eyes, wash immediately with plenty of water and call a doctor. Call a doctor immediately in the event of accidents or illness.
	Do not dispose of in normal waste stream (symbol waste electrical and electronic equipment).

3. ENVIRONMENTAL REQUIREMENTS AND HANDLING



NOTE!

Before carrying out any operations on the unit read the 'Safety standards' chapter carefully.

3.1 ENVIRONMENTAL REQUIREMENTS


The room must be:

- of a suitable size
- free from conductive, inflammable and corrosive items;
- not exposed directly to sunlight.

The floor must support the weight of the unit and guarantee its stability. The unit is designed for indoor installation only.





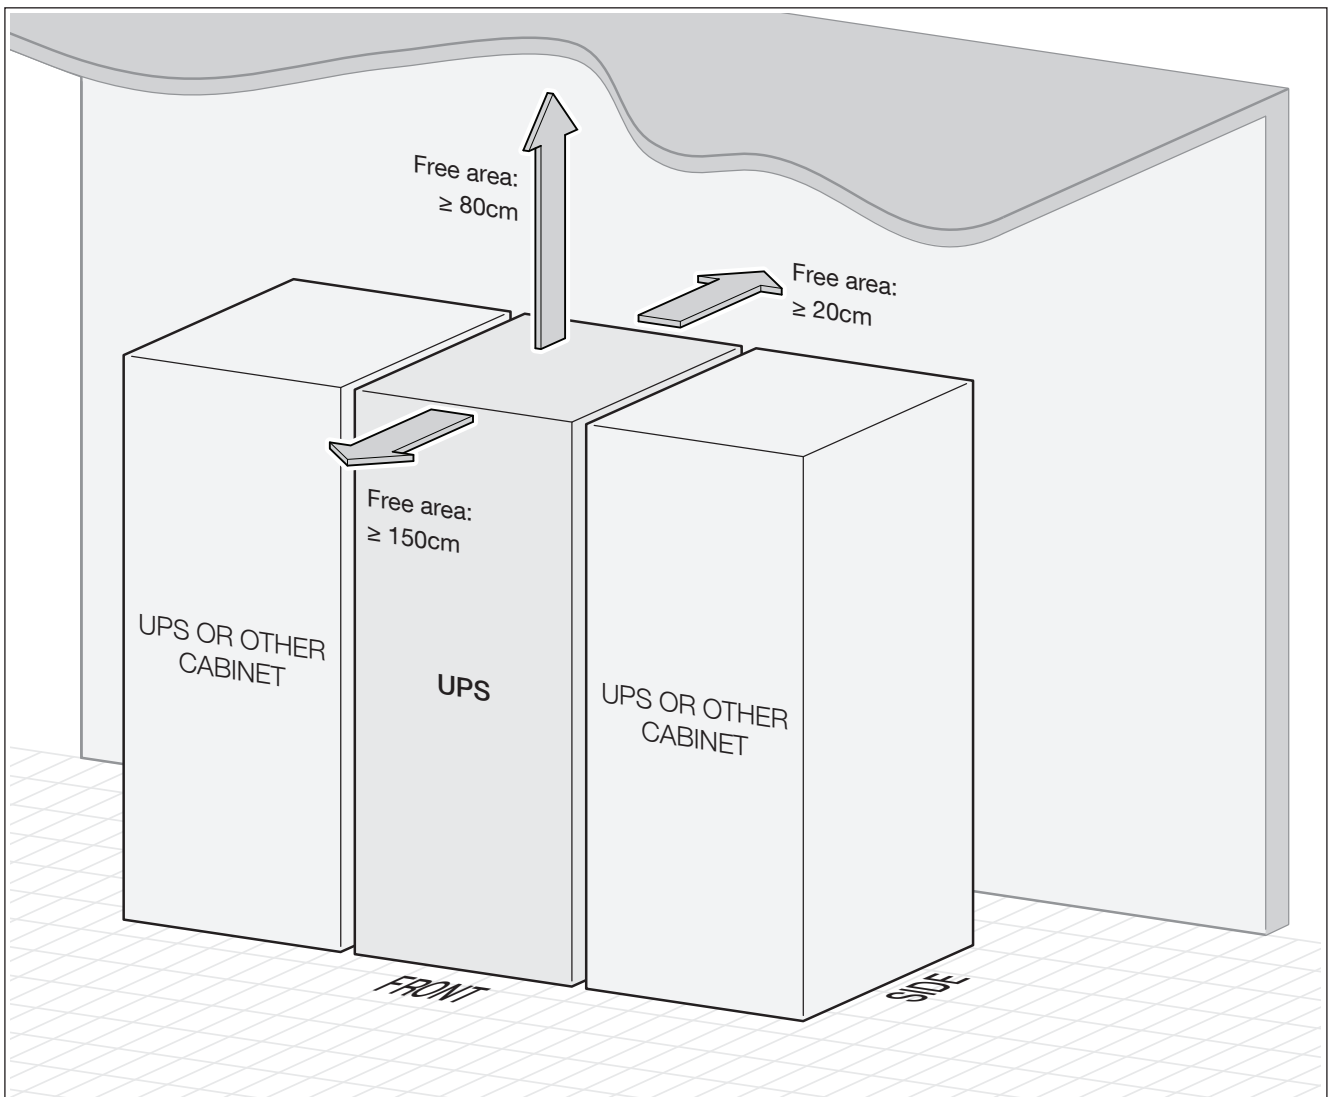

ROOM POSITIONING


For information regarding ambient temperature, dimensions and weights refer to the 'Technical specifications' chapter.








3.2 HANDLING

- The packaging guarantees the stability of the unit during shipping and physical transfer.
- The unit must remain in a vertical position during all shipping and handling operations.
- Ensure that the floor is strong enough to support the weight of the unit.
- Carry the packaged unit as close as possible to the installation site.

	WARNING! HEAVY WEIGHT! Move the unit using a fork lift truck taking the utmost caution at all times.
	The unit MUST be handled by at least two people. The people MUST take position at the sides of the UPS with respect to the direction of movement.
	Do not move the unit by putting pressure on the front door.
	When moving the unit on even slightly sloping surfaces, use the locking equipment and braking devices to ensure that the unit does not fall over.
	WARNING! The following instructions must be carried out prior to moving the unit (after initial positioning). Failure to heed this warning could result in the unit falling over, equipment damage, injury and even death.
	Always use stabiliser bars if provided (see diagram below).

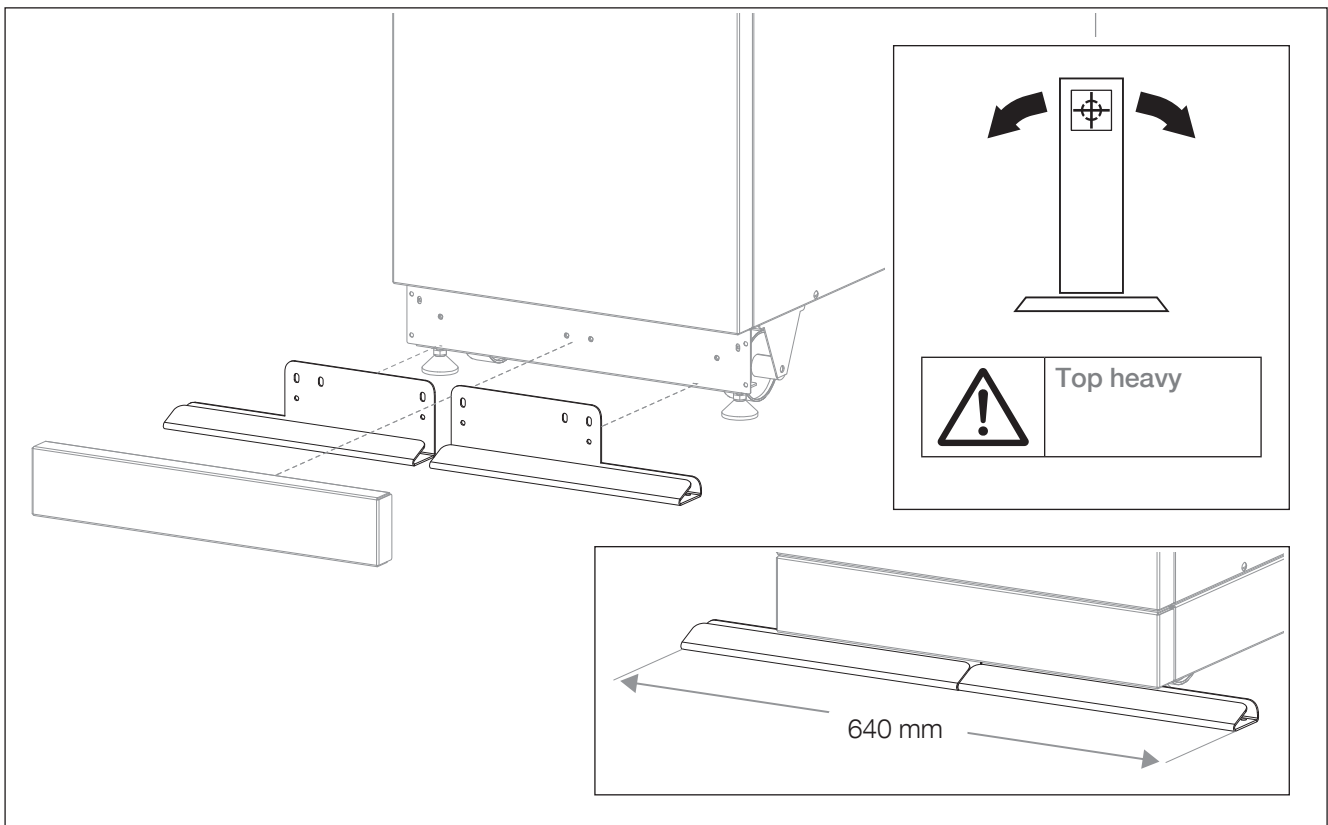


UNPACKING PROCEDURES

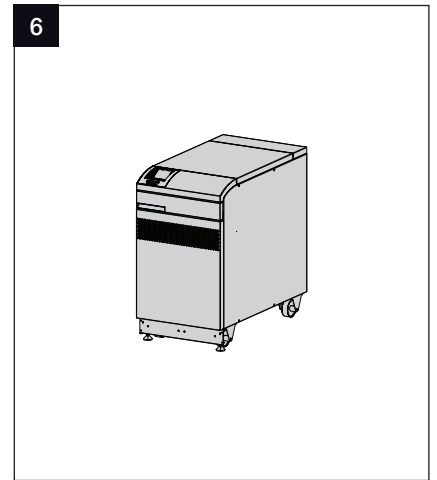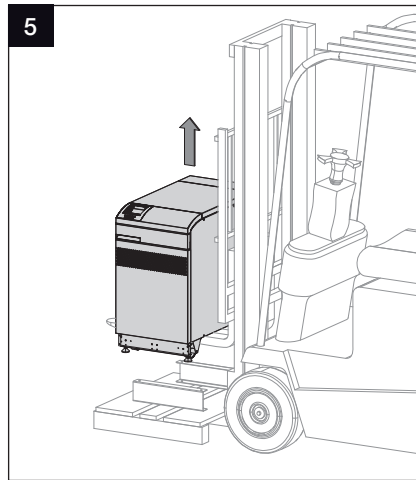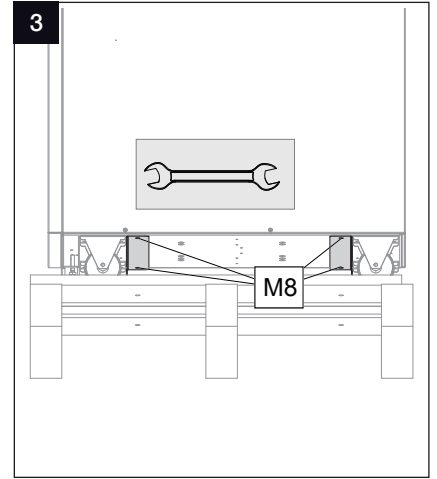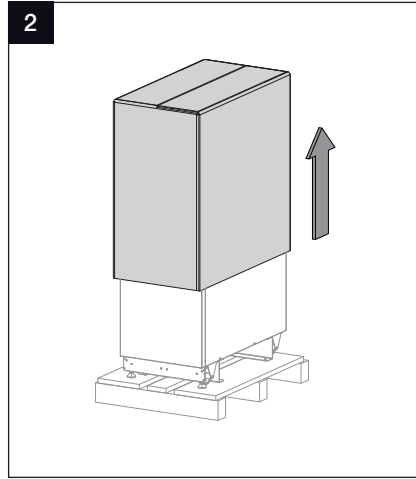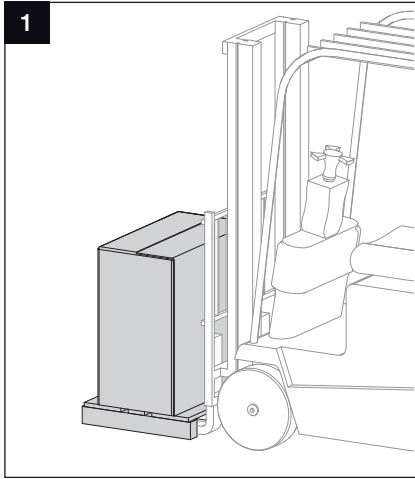

4. ELECTRICAL INSTALLATION

4.1 UPS SINGLE CONFIGURATION

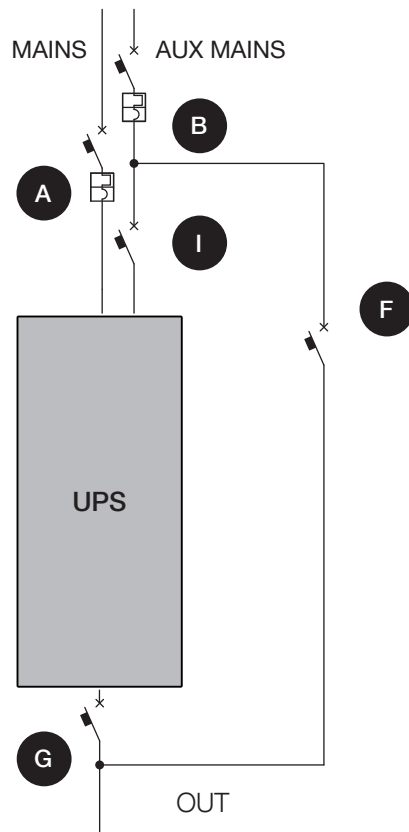


KEY

- A Input mains thermal-magnetic circuit breaker.
- B Auxiliary mains thermal-magnetic circuit breaker.
- F⁽¹⁾ External maintenance by pass switch.
- G Unit output switch.
- I Unit Auxiliary mains switch

1. Connect a normally-closed early make contact from the External Maintenance bypass switch to the dedicated connector (if present) or to the ADC+SL board.

4.2 UPS PARALLEL CONFIGURATION

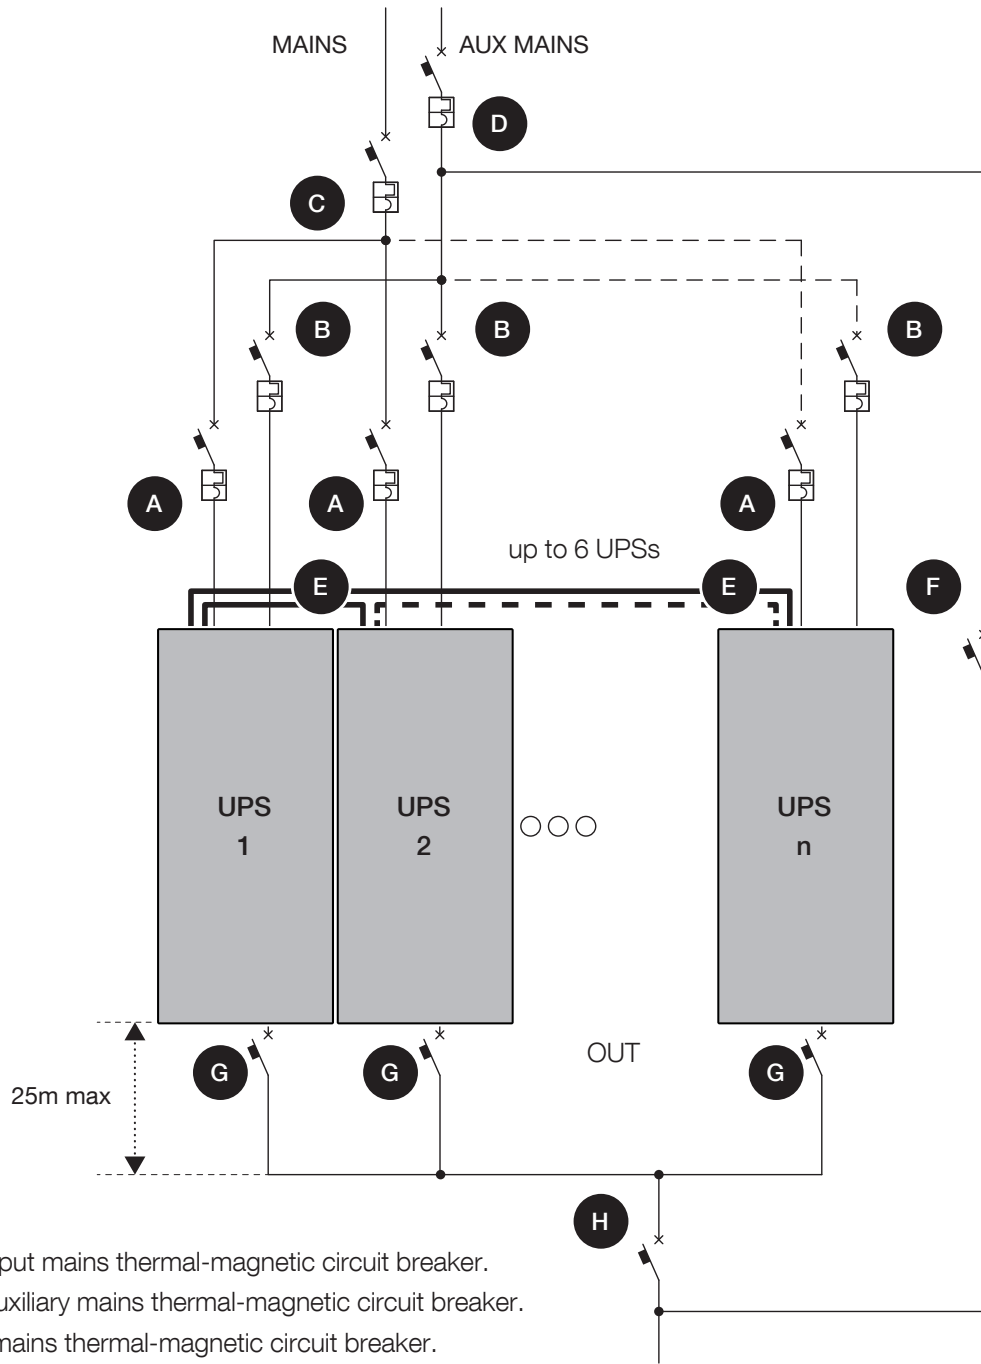

KEY

- A Unit Input mains thermal-magnetic circuit breaker.
- B Unit Auxiliary mains thermal-magnetic circuit breaker.
- C Input mains thermal-magnetic circuit breaker.
- D Auxiliary mains thermal-magnetic circuit breaker.
- E Parallel bus cable.
- F⁽¹⁾ External maintenance by pass switch.
- G⁽¹⁾ Unit output switch.
- H⁽¹⁾ System shutdown switch.

1. Connect signal status to the parallel board.

4.3 ELECTRICAL REQUIREMENTS



NOTE!

Before carrying out any operations on the unit read the 'Safety standards' chapter carefully.

The installation and system must comply with national plant regulations.

The electrical distribution panel must have a sectioning and protection system installed for input and auxiliary mains.

RCD is not necessary when the UPS is installed in a TN-S system.

RCD is not allowed on TN-C systems.

If a RCD is required a B-type should be used.

Size of input protection devices					
In/Out phase	Model rating	Input Mains Breaker ⁽¹⁾	Aux Mains Breaker ⁽¹⁾	Differential input	Battery protection ⁽⁴⁾
	(kVA)	(A)			
		A	B	Selective type	Fuse type aR
3/1	10	25	63	0.5	32
	15	32	80	0.5	40
	20	40	125	0.5	50
3/3	10	25	25	0.5	32
	15	32	32	0.5	40
	20	40	40	0.5	50
	30	63	63	0.5	80
	40	80	80	0.5	100

Cable core size ⁽²⁾						
In/Out phase	Model rating	Input	Auxiliary	Output	Battery	
	(kVA)	(mm ²)				
		Max ⁽³⁾				
3/1	10	25	50	50	25	M8
	15	25	50	50	25	M8
	20	25	50	50	25	M8
3/3	10	25	25	25	25	M8
	15	25	25	25	25	M8
	20	25	25	25	25	M8
	30	50	50	50	50	M8
	40	50	50	50	50	M8

M8 terminals | Tightening torque 20 Nm









25 mm² | Tightening torque 3 Nm

50 mm² | Tightening torque 5 Nm

1. Circuit breaker switch recommended with magnetic intervention threshold $\geq 10 I_n$ (curve C). It is necessary to use a D curve selective breaker if an optional external transformer is used.
2. **For parallel configuration**, cables shall have the same size and length for each unit (maximum length tolerance is $\pm 5\%$). Output cables should be less than 25 metres.
3. Determined by the size of the terminals.
4. Tripole protection on external battery cabinet.
Recommended values to avoid unwanted tripping with UPS at full power, minimum battery voltage and backup time of at least 5 min. Recommended Rapid fuse type or thermal-magnetic circuit breaker with intervention threshold = $3 I_n$ suited for DC applications.

	<p>CAUTION: Residual Current Detection (RCD) can only be used in the case of a common input and auxiliary mains (configuration not recommended). It has to be placed upstream of the connection between input mains and auxiliary mains. If RCD is installed the trigger value must be 0.5 A multiplied by the number of units connected in parallel.</p> <p>Use type B four-pole selective (S) residual current detectors. Load leakage currents are to be added to those generated by the UPS and during transitory phases (power failures and power returns) short current peaks may occur. If loads with high leakage current are present, adjust the residual current protection. It is advisable in all cases to carry out a preliminary check on the earth current leakage with the UPS installed and operational with the definitive load, so as to prevent the RCD tripping over.</p>
	<p>NOTE:</p> <p>To ensure the integrity of the 10-15-20 kVA 3/1 bypass thyristors, I^2t must be lower than 14400 A²s and peak current must be lower than 2.4 kA for 10 ms.</p> <p>To ensure the integrity of the 10-15-20 kVA 3/3 bypass thyristors, I^2t must be lower than 7200 A²s and peak current must be lower than 1.2 kA for 10 ms.</p> <p>To ensure the integrity of the 30-40 kVA 3/3 bypass thyristors, I^2t must be lower than 15000 A²s and peak current must be lower than 2 kA for 10 ms.</p> <p>Contact SOCOMEC for detailed information.</p>
	<p>The UPS is designed for transient overvoltages in category II installations. If the UPS is part of the building's electrical circuit, or is likely to be subject to transient overvoltages in category III installations, additional external protection must be provided, either on the UPS or in the AC power supply network powering the UPS.</p>
	<p>The UPS is designed for indoor environmental service conditions according to IEC 60721-3-3 with pollution degree lower or equal to 2 (non-conductive pollution).</p>
	<p>WARNING: as specified in 62040-3 Appendix 3: Non-linear Load Reference, in the event of three-phase non-linear loads connected downstream of the UPS, the neutral current on the load can be 1.5 - 2 times higher than the phase current. This must be considered when estimating the correct size of the output and the auxiliary neutral cables.</p> <p>The max. non linear load admitted per phase is 8 kVA.</p>
	<p>WARNING: protective earthing conductor (PE) must have sufficient current-carrying capacity. The PE cable core size must be chosen according to the PROTECTIVE CURRENT RATING of the earth circuit which depends on the provision and location of protective overcurrent devices.</p>
	<p>NOTE: 3-Phase 4-Wire Input Power is required.</p> <p>The unit can be installed in TN-C, TN-S, TT and IT AC distribution systems (IEC 60364-3).</p>


ADDITIONAL REQUIREMENTS FOR PARALLEL CONFIGURATION


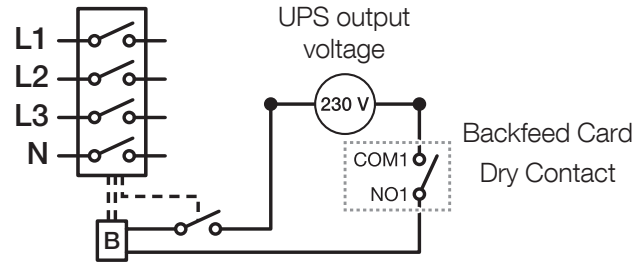
	The UPS is designed for transient overvoltages in category II installations. If the UPS is part of a parallel configuration and the total output rated current is > 400 A, additional external protection must be provided.
	The phase rotation of aux mains and output cables must be the same for each unit.
	System shutdown switch H should always be installed in the external distribution cabinet and recognised as an emergency shutdown switch (red handle). If this switch is far from the UPS or in another room a remote shutdown button shall be installed near the UPS.
	Before turning on an individual unit ensure that the relevant unit output switch G is closed.
	Before opening unit output switch G ensure that the relevant unit is turned off.
	If unit output switches G are present, it is advisable to connect a normally open early break contact from the switch to the unit's parallel board.
	If an external maintenance bypass switch F is present, it is advisable to connect a normally closed early make contact from the switch to the parallel board of the concentrator unit.
	If a system shutdown switch H is present, it is advisable to connect a normally closed early break contact from the switch to the parallel board of the concentrator unit.

4.3.1 BACKFEED PROTECTION


The UPS is set up for the installation of external protection devices against the backfeed of dangerous voltages, on both the input power supply line (MAINS SUPPLY) and on the auxiliary backup mains power supply line (AUX MAINS SUPPLY); these devices are controlled by means of the card shown in figure.


The current rating of the switching device has to follow the instruction outlined in 'Electrical requirements' chapter.

	<p>DANGER! RISK OF ELECTRIC SHOCK! The installer must attach the warning label in order to warn electrical technicians about dangerous backfeed situations (not caused by the UPS).</p>
---	--

<p>Warning label (supplied with the equipment)</p> <div style="border: 1px solid black; padding: 10px; margin: 10px auto; width: 80%;"> <p style="text-align: center;">Before working on this circuit</p> <ul style="list-style-type: none"> - Isolate the Uninterruptible Power System (UPS) - Then check for Hazardous Voltage between all terminals including the protective earth <div style="display: flex; align-items: center; justify-content: center; margin-top: 10px;">  <p>Risk of Voltage Backfeed</p> </div> </div>	<p>Backfeed electrical diagram</p> 
--	---

Backfeed trip coils supply

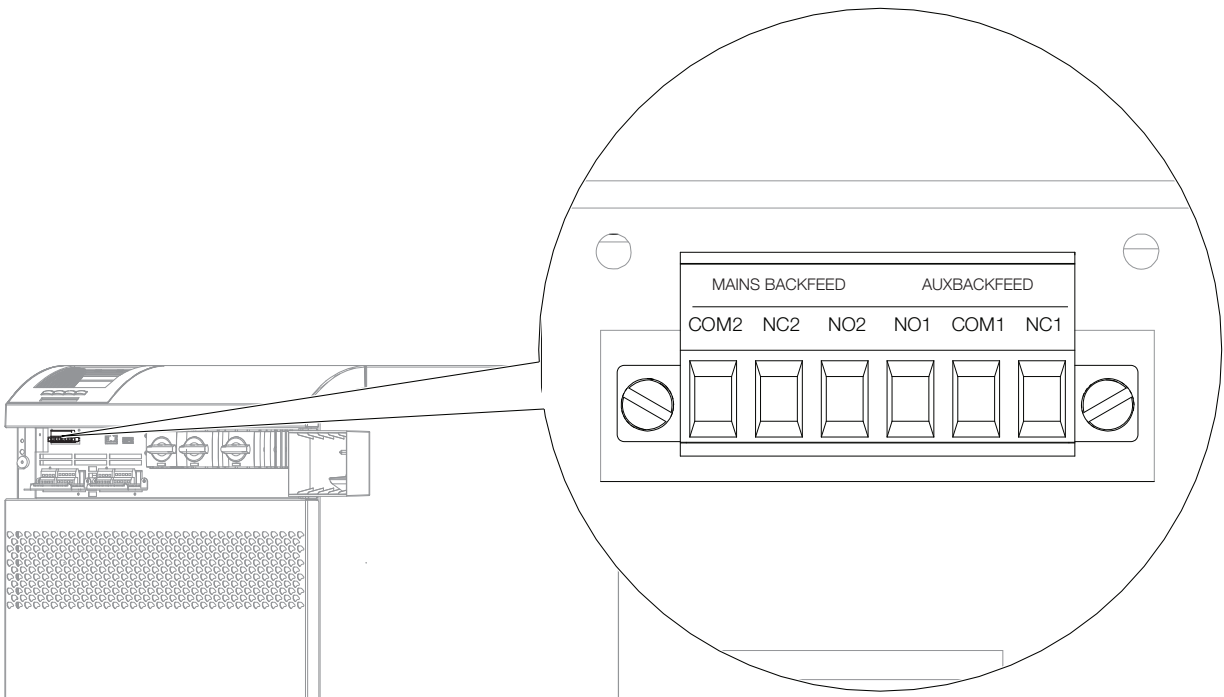


	<p>NOTE: Use a 220-240 V trip coil with integrated travel limit contact to pilot the input/auxiliary protection systems. If a trip coil without an integrated end of travel contact is used, a normally open contact must be added. Electrical contact data: 1.6 A 250 V AC.</p>
---	---

As an option the unit can be delivered with the integrated internal backfeed switches. Refer to 'Standard features and option' chapter.

- Separated input mains

Activating UPS protection on the mimic panel: access the MAIN MENU > SERVICE > UPS SETTINGS > INPUT TYPE > MAINS / AUXILIARY and set the parameter to **SEPARATED**.


3/3 MODELS

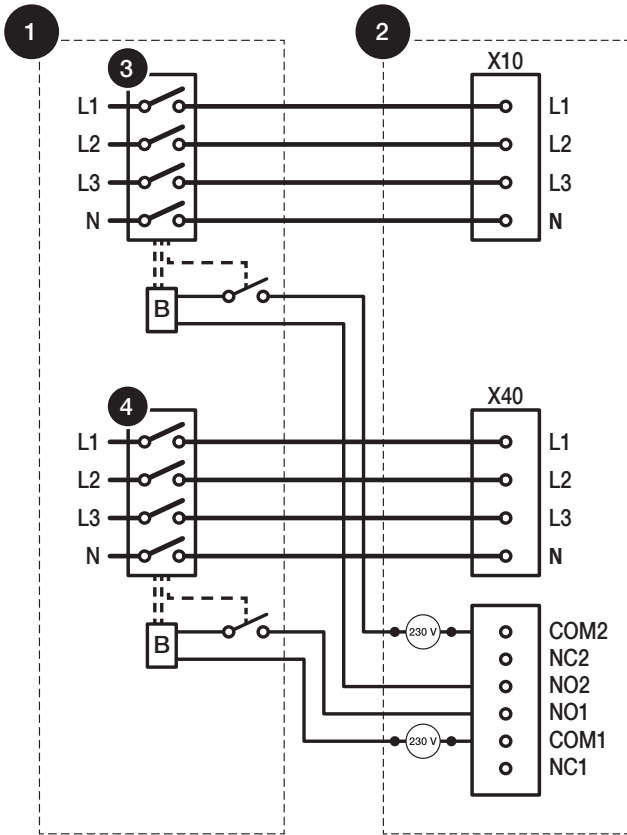

KEY

1	Distribution panel
2	UPS
B	Trip coil
X10	Mains terminal board
X40	Aux Mains terminal board
3	Mains switch
4	Aux Mains switch
COM2 - NO2	Mains BKF connector
COM1 - NO1	Aux Mains BKF connector
230 V	UPS output voltage

3/1 MODELS

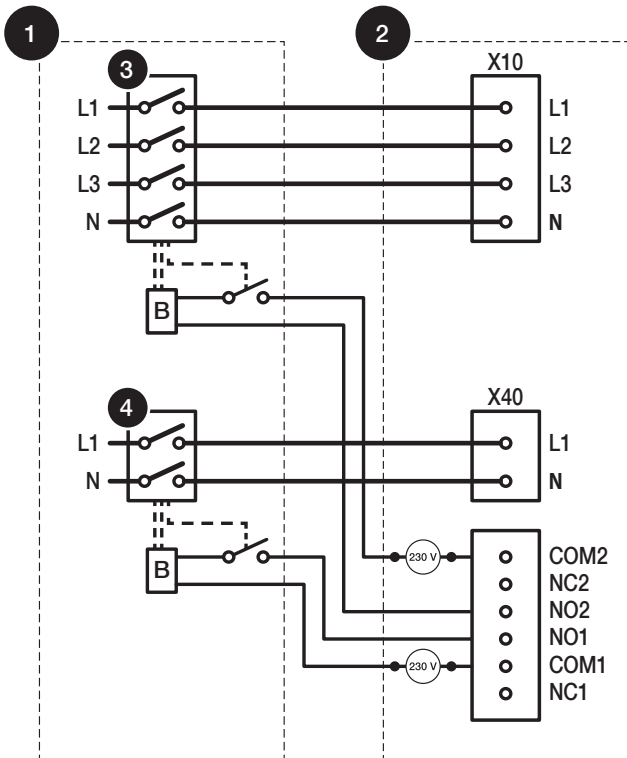


KEY

1	Distribution panel
2	UPS
B	Trip coil
X10	Mains terminal board
X40	Aux Mains terminal board
3	Mains switch
4	Aux Mains switch
COM2 - NO2	Mains BKF connector
COM1 - NO1	Aux Mains BKF connector
230 V	UPS output voltage


- Common input mains

Activating UPS protection on the mimic panel: access the MAIN MENU > SERVICE > UPS SETTINGS > INPUT TYPE > MAINS / AUXILIARY and set the parameter to **COMMON MAINS**.



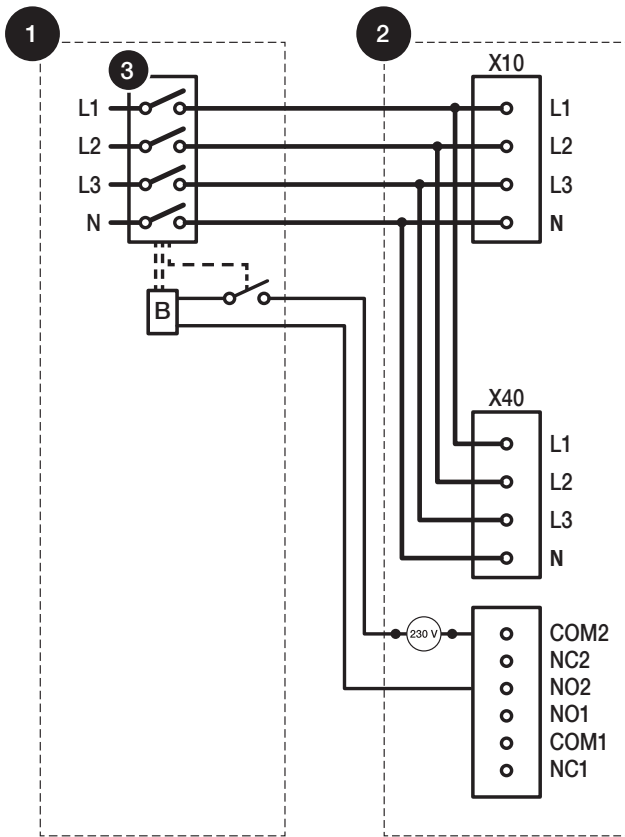

3/3 MODELS





KEY

1	Distribution panel
2	UPS
B	Trip coil
X10	Mains terminal board
X40	Aux Mains terminal board
3	Mains switch
COM2 - NO2	Common mains BKF connector
	UPS output voltage

4.4 CABLE POSITIONING

	WARNING! The cables must be installed on trays according to the following diagrams. The trays must be positioned near the UPS.
	WARNING! All metal and suspended ducts or those in raised flooring MUST be connected to earth and to the various cabinets
	WARNING! Power cables and control cables MUST NEVER be installed in the same duct.
	WARNING! Risk of electromagnetic interference between battery cables and output cables.

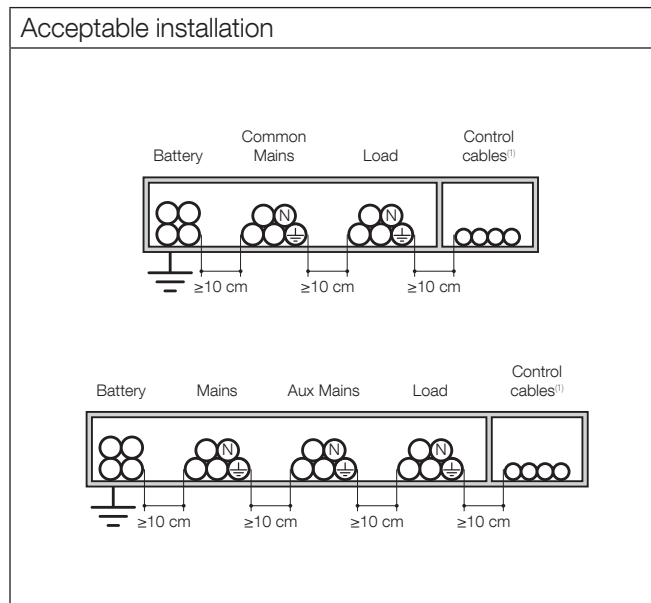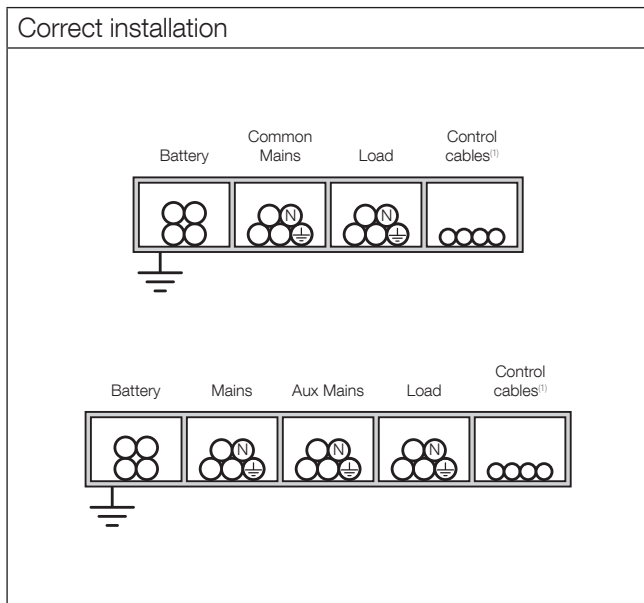


1. Control cables: connections between the cabinets and each unit, alarm signals, remote mimic panel, connection to the BMS (Building Management System), emergency stop, connection to generator.

5. OVERVIEW

5.1 FRONT VIEW

KEY

- 1 Control panel
- 2 UPS door
- 3 Luminous status bar

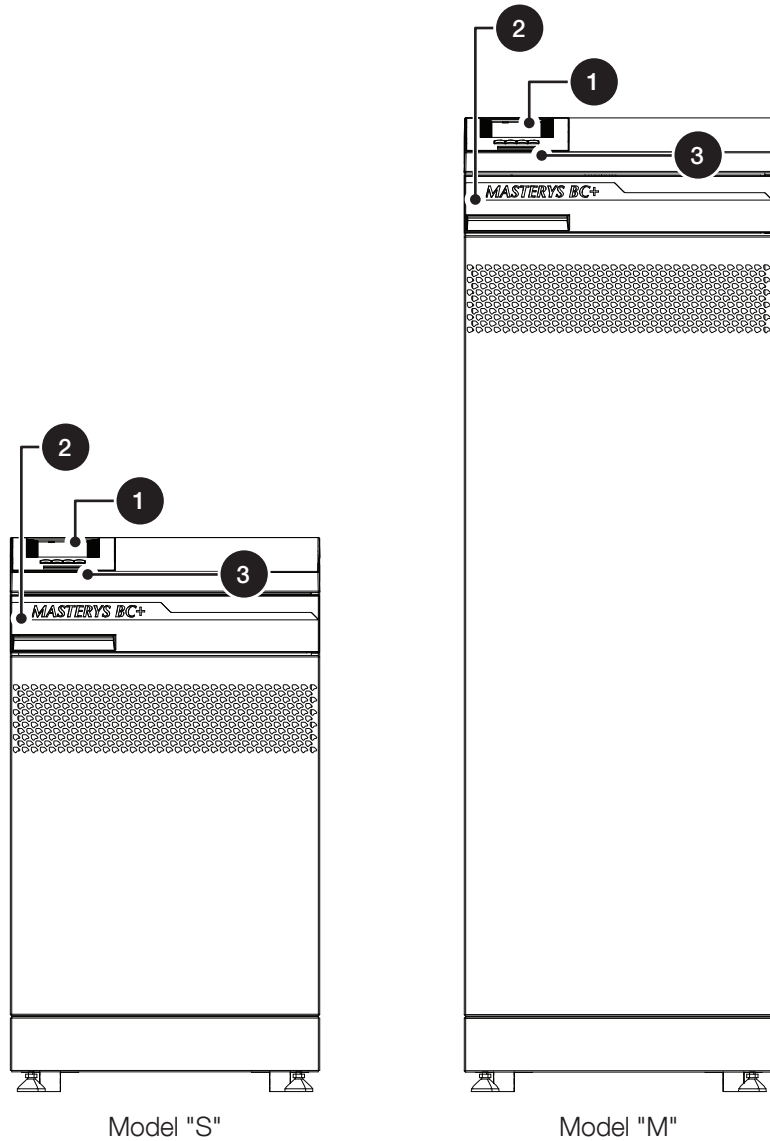

5.2 UPS SWITCHES

KEY

- Q2** Battery switch
- Q5** Maintenance bypass switch
- Q3** Output switch

UPS kVA	In/Out phase	Battery type	Details
10-15-20	3/1	Internal battery	
	3/3		
30-40	3/3		

5.3 WIRING DIAGRAM

KEY

X10 Input mains

X40 Aux mains

X20 Battery

X50 Output

 PE

 
Q4 Auxiliary mains Input switch (AUX MAINS)

Q5 Maintenance bypass switch

Q2 Battery switch

Q3 Output switch

A Protection



5.4 INTERNAL FRONT VIEW DETAILS




KEY

- A1** Option slots 1
- A2** Option slots 2
- B** Ethernet network for service only
- C** USB connector for service only
- D** Backfeed connector




6. CONNECTIONS

	<p>NOTE! Before carrying out any operations on the unit read the 'Safety standards' chapter carefully.</p>
	<p>WARNING! Battery power terminals are supplied by external battery cabinet. Before working on this circuit ensure that:</p> <ul style="list-style-type: none">- all the external battery cabinet switches are in OFF position;- the UPS is in maintenance bypass mode (refer to 'Operating modes' chapter) <p>Check for presence of voltage before operating.</p>
	<p>Use cables with tin-plated eyelets for the PE connection.</p>

   

 6.1 EARTH CONNECTION



6.2 UPS CONNECTION





- Remove terminal board protection.
- Connect the protective earth (PE) cable.

	<p>WARNING! Strictly observe:</p> <ul style="list-style-type: none"> - the polarity of each individual string (refer to the figure below); - the cable cross section (refer to 'Electrical requirements' chapter).
	<p>WARNING! Cabling errors with inversion between phase and neutral conductors may cause permanent damage to the equipment.</p>
	<p>Reassemble terminal board protection.</p>


UPS kVA	In/Out phase	Battery type	Details ¹
10-15-20	3/1	Internal battery	
	3/3 Common inputs		
30-40	3/3 Separated inputs		

1. For further details refer to 'Electrical requirements' chapter.

   6.3 COMPLETION OF THE INSTALLATION

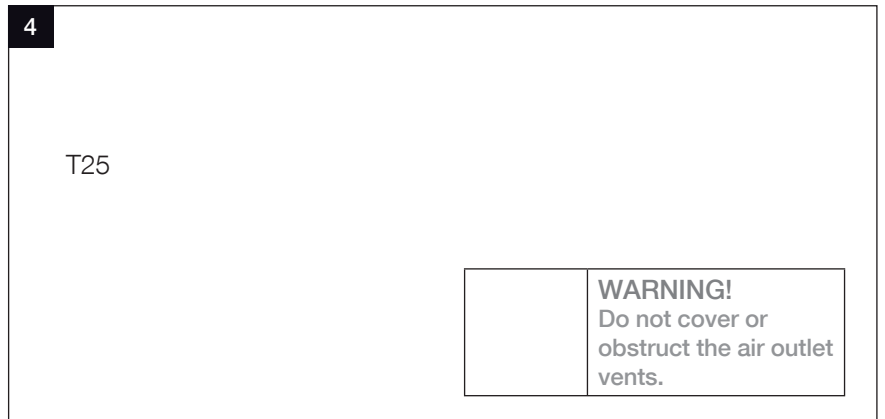

7. CONTROL PANEL

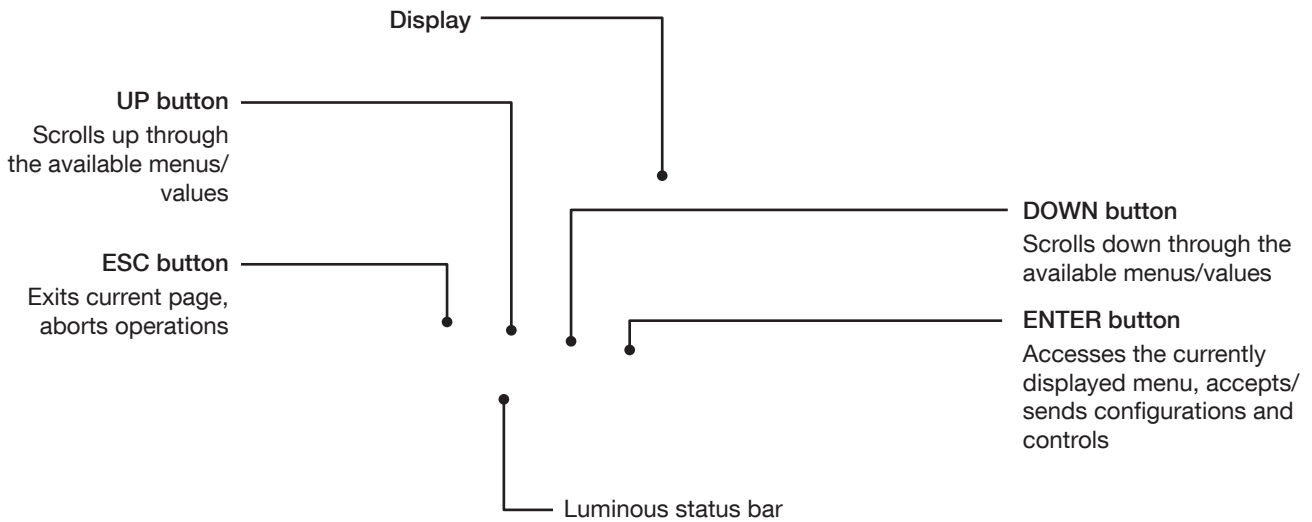

Control panel with LED status bar indicator	
Colour	Description
Flashing red-yellow-green-red	No communication. The data is no longer updated or not present. Load status cannot be given.
Flashing red	Load supplied, but the output will stop in a few minutes.
Red	Load not supplied: Output switched OFF due to an alarm.
Flashing yellow-red	Load supplied, but no longer protected. A critical alarm occurs.
Flashing yellow	Maintenance request / in progress.
Yellow	Load supplied with warning.
Flashing green-yellow-green	Load supplied and preventive alarm present.
Flashing green	Load going to be supplied and tested.
Green	Load protected in inverter.
Grey (OFF)	Load not supplied output on standby / isolated / OFF.

KEYPAD LOCK

The keypad can be locked by pressing the buttons in the following sequence:

ESC > UP > DOWN > ENTER

To unlock the keypad the buttons must be pressed in the reverse sequence:

ENTER > DOWN > UP > ESC

These sequences work only on the MIMIC PANEL page.

When the keypad is locked the key symbol is shown.

8. MENU


8.1 DISPLAY OVERVIEW (SYSTEM)

Mimic panel





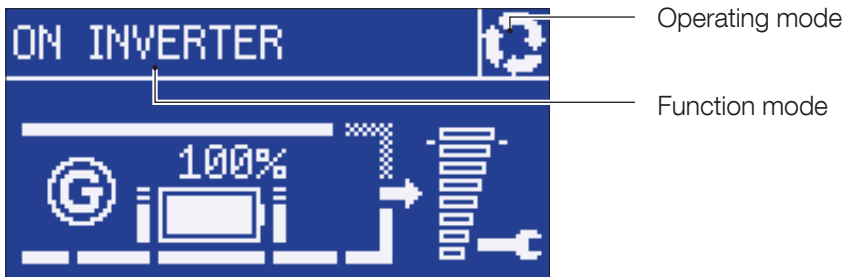

SEGMENT	DESCRIPTION
1	BYPASS INPUT
2	BYPASS OUTPUT
3	INPUT MAINS
4	UNIT OUTPUT
5	INVERTER OUTPUT
6	SYSTEM OUTPUT
7	N° UNIT

8.2 DISPLAY OVERVIEW (UNIT)

Status bar (always displayed)



Unit status	Description
UPS STARTING	The start procedure is in progress
UPS STOPPING	The stop procedure is in progress
ON MAINT. BYPASS	The manual bypass is active
IMMINENT STOP	The output supplying switch-off is imminent
ON BATTERY	The output load is on battery
BATTERY TEST	Battery test in progress
ON INVERTER	The output load is on inverter (normal mode)
ON AUTO BYPASS	The output load is on static bypass
UNIT AVAILABLE	Energy saver is active (inverter is off temporarily)
STANDBY	Unit on standby
LOAD OFF	The output load is off

Function mode	Description
	The UPS is in maintenance mode
	Output breaker / output relays open
	Eco mode schedule enabled
	An eco mode command has been carried out
	A remote stand-by command has been carried out
	The energy-saver mode has been enabled
<NOTHING DISPLAYED>	Normal mode

Mimic panel


SEGMENT	DESCRIPTION
1	INPUT MAINS
2	RECTIFIER ON
3	INVERTER INPUT OR BATTERY OUTPUT
4	INVERTER OUTPUT
5	UNIT OUTPUT
6	OUTPUT FROM STATIC SWITCH
7	BYPASS INPUT

NOTE!
When in converter mode, 6 and 7 are not shown.


Bar styles identify the energy flow:

- solid: enabled
- dotted: disabled


Additional icons

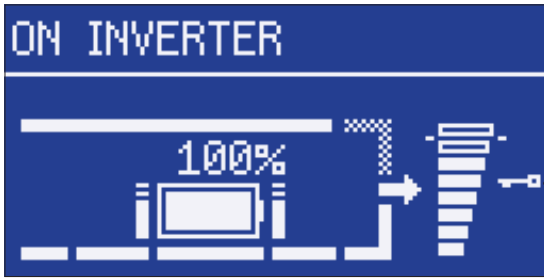

key icon: displayed if the keypad is locked

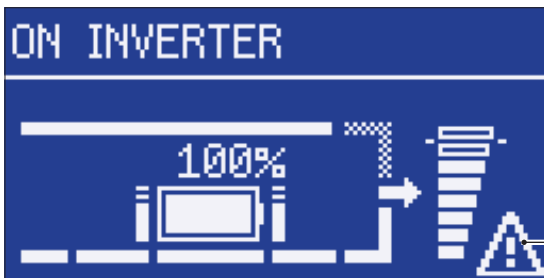


General alarm

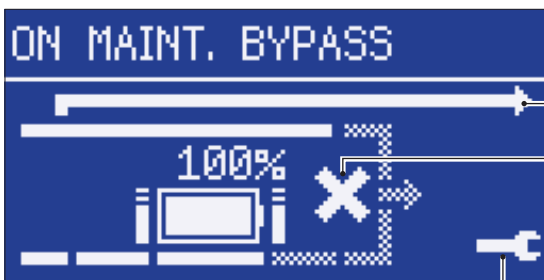

On maintenance bypass

Bypass mode (or Eco Mode) not possible


Scheduled Inspection warning: machine inspection required, call SOCOMEC support service

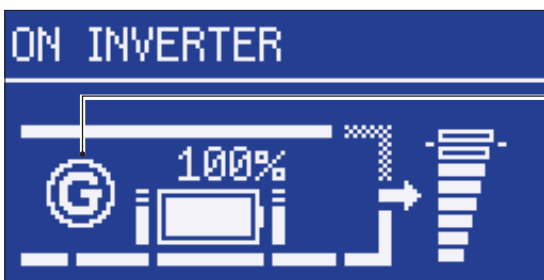

Operating on GenSet

NOTE! Available only with ADC+SL option card

Load level

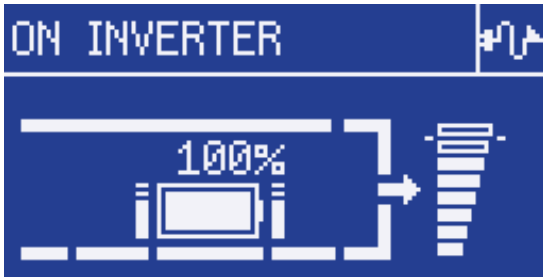


0% 0% < & ≤ 10% 10% < & ≤ 20% 20% < & ≤ 30% 30% < & ≤ 40%

40% < & ≤ 60% 60% < & ≤ 80% 80% < & ≤ 100%

> 100%

Maintenance bypass
activated/Load value
not available

Battery status

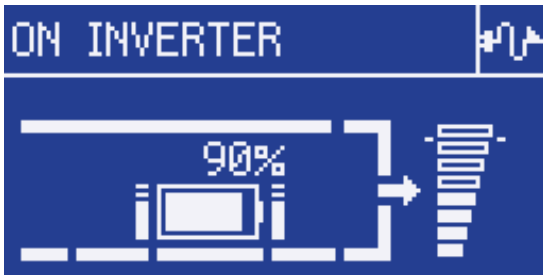

NOTE: Battery symbol is shown only if battery available

Battery charging

Upper level flashing



Battery discharging

Level reached is flashing



Battery open



Battery alarm flagged

8.3 MENU TREE

	MENU ITEMS ⁽¹⁾		
	Stand alone UPS	Unit	System
ALARMS	•	•	•
STATUS	•	•	•
EVENTS LOG	•	•	•
MEASUREMENTS			
▶ OUTPUT MEASURES	•	•	•
▶ BATT. MEASURES	^	^	^
▶ INPUT MEASURES	•	•	•
▶ BYPASS MEASURES	•	•	•
CONTROLS			
▶ PROCEDURE			
▶ START PROCEDURE	•	•	•
▶ MAINT. BYPASS PROC.	•		•
▶ STOP PROCEDURE	•	•	
▶ BATTERY			
▶ BATT. TEST RESULT	^	^	^
▶ BATTERY TEST	^	^	^
▶ TEST SCHEDULE	^	^	^
▶ ECO MODE			
▶ ECO MODE ON	•		•
▶ ECO MODE OFF	•		•
▶ ECO MODE SCHEDULING	•		•
▶ ENERGY SAVER			
▶ ENERGY SAVER ON			•
▶ ENERGY SAVER OFF			•
▶ MAINTENANCE			
▶ ALARMS RESET	•	•	•
▶ POSTPONE MAINT. ALERT	•	•	•
▶ LED TEST	•	•	•
UPS CONFIG			
▶ CLOCK	•		•
▶ REMOTE CONTROLS	•		•
▶ COMM SLOT TEMP PROBE			
▶ TEMPERATURE PROBE	^	^	^
▶ SLOT 1 RS485	•	•	•
▶ SLOT 2 RS485	•	•	•
▶ REFERENCE			
▶ UPS INFO	•	•	•
▶ SERIAL NUMBER	•	•	•
▶ SOCOMEK REFERENCE	•	•	•
▶ USER DEVICE REF	•	•	
▶ USER DEV LOCATION	•	•	

	MENU ITEMS ⁽¹⁾		
	Stand alone UPS	Unit	System
USER PARAMETERS			
▶ LANGUAGE	•		•
▶ PASSWORD	•		•
▶ BUZZER	•		•
▶ COM SLOT	•	•	
▶ ADC+SL 1 CONFIG	•	•	
▶ ADC+SL 2 CONFIG	•	•	
▶ DISPLAY	•	•	•
SERVICE			
▶ COMMISSIONING CODE	^	^	^
▶ SERVICE REPORT	•	•	
▶ FIRMWARE VERSIONS	•	•	
▶ NETWORK PARAMETERS			
▶ DHCP	•	•	
▶ IP ADDRESS	•	•	
▶ SUBNET MASK	•	•	
▶ GATEWAY	•	•	
▶ MAC ADDRESS	•	•	
▶ UPS SETTINGS			
▶ OUTPUT			
▶ OUTPUT VOLTAGE	•		•
▶ OUTPUT FREQUENCY	•		•
▶ CONVERTER MODE	•		•
▶ AUTOMATIC RESTART	•		•
▶ BATTERY			
▶ BATTERY AVAILABLE	^	^	^
▶ CONNECTION TYPE	^	^	^
▶ BATTERY TYPE	^	^	^
▶ RECHARGE TYPE	^	^	^
▶ ...	^	^	^
▶ INPUT TYPE	•		•
▶ PARALLEL SYSTEM			
▶ UNITS IN PARALLEL			•
▶ REDUNDANCY LEVEL			•


(^). depending on setting.

1. Some menu options may not be available on some UPS models.

8.4 MENU FUNCTION DESCRIPTIONS

8.4.1 ENTERING PASSWORDS

Some operations and settings require a password in order to be performed.

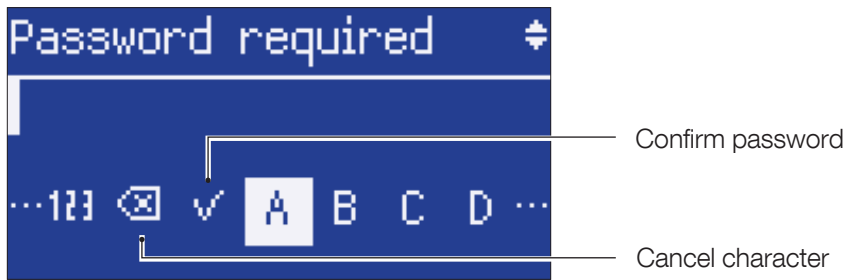

The default password is **SOCO**.

Press **UP** and **DOWN** to scroll the letters. Press **ENT** to confirm the selection or **ESC** to abort.

8.4.2 ALARMS MENU

This menu displays all pending UPS alarms.

To reset alarms enter the menu **MAIN MENU > CONTROLS > MAINTENANCE > ALARMS RESET**.

If there is more than one page press **UP/DOWN** to scroll pages.

8.4.3 STATUS MENU

This menu displays all UPS ON statuses.

If there is more than one page press **UP/DOWN** to scroll pages.

8.4.4 EVENT LOG MENU

This menu accesses the event log (Status and Alarms).

8.4.5 MEASUREMENTS MENU

This menu displays all UPS measurements relating to the input stage, output stage, batteries and auxiliary mains (bypass).

If there is more than one page press **UP/DOWN** to scroll pages.

8.4.6 CONTROLS MENU

This menu contains the controls that can be sent to the UPS. Some of them are password protected. If a command is not available, a **COMMAND FAILURE** message appears.

- **PROCEDURE: START PROCEDURE/MAINT. BYPASS PROC./STOP PROCEDURE** see 'Operating procedures' chapter.
- **BATTERY: BATTERY TEST:** this function checks whether or not test conditions are available then returns the results.
- **ECO MODE: ON/OFF:** this function sets/resets the ECO MODE.
- **MAINTENANCE: ALARMS RESET:** this function clears the alarm history, **LED TEST:** this function activates the LED by flashing for few seconds.

8.4.7 USER PARAMETERS MENU

This menu contains all the machine settings such as language, date and buzzer.

To reset the language back to English, press the **ESC** button for 5 seconds.

System critical parameters are password protected and should be changed by specialist personnel only.

8.4.8 SERVICE MENU

This menu is reserved for support service personnel and holds UPS identification data and utilities for software upgrades.

The Commissioning Code is provided directly by the reference Support Centre upon communication of the serial number. When contact is made with the Support Centre for the Commissioning Code, detailed information can be obtained on the UPS functions available and on regular preventive maintenance programmes.

- UPS SETTINGS: critical machine settings for output, batteries and backfeed.
Some parameters cannot be modified when the UPS supplies the load by INVERTER or BYPASS.

	Wrongly configured UPS SETTINGS could damage the load or batteries.
--	--

9. OPERATING PROCEDURES

	NOTE: before carrying out any operations on the unit read the 'Safety standards' chapter carefully.
	NOTE: with the stop procedure the load will be disconnected.

9.1 SWITCHING ON

- Connect the mains and auxiliary mains to the UPS.
- Switch **ON** input switch **Q1**.
- Wait until display switch on.
- Enter MAIN MENU > CONTROLS > PROCEDURE.
- Select START PROCEDURE and press **ENTER**.
- Carry out the operations indicated on the display.

9.2 SWITCHING OFF

This operation interrupts the power supply to the load. The UPS and the battery charger will be shut down.

- Enter MAIN MENU > CONTROLS > PROCEDURE.
- Select STOP PROCEDURE and press **ENTER**.
- Wait approx. 2 minutes for the UPS shutdown.

	NOTE: the controlled shutdown of each server connected to the LAN can be managed by shutdown software.
--	---

- Carry out the operations indicated on the display.

9.3 BYPASS OPERATIONS

SWITCHING ONTO MAINTENANCE BYPASS

This operation creates a direct connection between the UPS input and output, excluding the equipment control part. This operation is performed in the event of:

- standard maintenance.
- serious failure has occurred.

	WARNING! LOAD POWERED BY AUX MAINS: your load is exposed to mains disturbances.
--	--

- Enter MAIN MENU > CONTROLS > PROCEDURE.
- Select MAINT. BYPASS PROC. and press **ENTER**.
- Carry out the operations indicated on the display.

	NOTE! When an external manual bypass is present: <ul style="list-style-type: none">- carry out the procedure described above;- put the switch to position 1.
--	--

SWITCHING ON FROM MAINTENANCE BYPASS

- Put switch **Q1** into position **1** (mains ON).
- Wait for the display to switch on.
- Enter MAIN MENU > CONTROLS > PROCEDURE.
- Select START PROCEDURE and press **ENTER**.
- Carry out the operations indicated on the display.

	NOTE! When an external maintenance bypass ⁽¹⁾ is present, put the switch to position 0 (OFF).
--	--

1. Not monitored by the UPS or by the parallel system.

9.4 EXTENDED OUT OF SERVICE

When the UPS is deactivated for some time, the batteries must be recharged regularly.

They should be recharged every three months.

- Check that output switches **Q3** and **Q5** are **OFF**.
- Connect the mains and auxiliary mains to the UPS.
- Switch **ON** input switch **Q1**.
- Wait until displays switch on.
- Close the external battery breaker/fuses.
- Wait until the batteries are fully charged. Check in the menu MAIN MENU > MEASUREMENTS > BATT. MEASURES.
- Open the external battery breaker/fuses.
- Switch **OFF** input switch **Q1**.

9.5 EMERGENCY SHUTDOWN

	NOTE! This operations interrupts the supply to the output load from both inverters and automatic bypass.
	If the UPS is operating from the maintenance bypass with the mains present, the emergency shutdown does not interrupt the power supply to the load. In emergency conditions all power supplies upstream of the UPS must be disconnected.

UPS POWER OFF

Put **Q3** to position 0 when it's necessary to interrupt the power supply quickly.

REMOTE UPS POWER OFF

It is possible to interrupt the power supply to the output load using the ADC+SL card. Refer to 'Standard features and option' chapter.

10. OPERATING MODES

10.1 ON LINE MODE

A special feature of the UPS is the ONLINE double conversion in conjunction with low distortion mains power absorption. In ON LINE mode, the UPS can supply a voltage that is fully stabilised in frequency and amplitude, regardless of any interference in the mains power supply, within the most stringent classification of UPS regulations.

ON LINE operation provides three operating modes according to mains and load conditions:

- Inverter mode

This is the most frequent operating condition: energy is drawn from the primary mains power supply and converted and used by the inverter to generate the output voltage to power the connected loads.

The inverter is constantly synchronised in frequency with the auxiliary mains to enable load transfer (due to an overload or inverter shutdown) without any break in the power supply to the load.

The battery charger supplies the energy required to maintain or recharge the battery.

- Bypass mode

In the event of inverter failure, the load is automatically transferred onto the auxiliary mains without any interruption in the power supply.

This procedure may occur in the following situations:

- in the event of a temporary overload, the inverter continues to power the load. If the condition persists, the UPS output is switched.
- on to the auxiliary mains via automatic bypass. Normal operation, which is from the inverter, returns automatically a few seconds after the overload disappears.
- when the voltage generated by the inverter goes outside the limits due to a major overload or a fault on the inverter.
- when the internal temperature exceeds the maximum value allowed.

- Battery mode

In the event of a mains failure (micro interruptions or extended power cuts), the UPS continues to power the load using the energy stored in the battery.

10.2 HIGH EFFICIENCY MODE

The UPS has a selectable, programmable economy operating mode (ECO MODE) that can increase overall efficiency by up to 99% for energy saving purposes. If the power supply fails, the UPS will automatically switch onto the inverter and continue to supply power to the load by drawing energy from the battery.

This mode does not provide perfect stability in frequency and voltage like the ON LINE mode. Therefore the use of this mode should be carefully evaluated according to the level of protection required by the application. With the optional board Net Vision specific daily or weekly time intervals can be selected and programmed to power applications directly from the auxiliary mains.

ECO MODE operation provides very high efficiency, since the application is powered directly from the auxiliary mains via the automatic bypass under normal operating conditions.

To activate follow the correct procedure in the control panel.

10.3 CONVERTER MODE

In converter mode the UPS can supply a fully stabilised sinusoidal output voltage with a different frequency from the input power line (50 Hz or 60 Hz is available as output frequency value).

NOTE: only set this mode on UPS units with the auxiliary mains (AUX MAINS) disconnected! Do not set this mode on UPS units with common mains lines as it could damage the load!
--

10.4 OPERATION WITH MAINTENANCE BYPASS

If the internal maintenance bypass is activated using the appropriate procedure, the load is powered directly from the maintenance bypass, while the UPS is separated from the power supply and can be switched off.

This operating mode can be selected for maintenance to be carried out on the system, so that the necessary actions can be performed by service personnel without having to disconnect the power supply to the load.

10.5 OPERATION WITH MOTOR GENERATOR (GENSET)

The UPS can be operated in conjunction with a generator (GENSET) over the ADC+SL card (refer to 'Standard features and option' chapter). With a generator, the frequency and voltage ranges of the auxiliary mains can be increased to accept the instability of the GENSET and at the same time to avoid operation from the battery or risks of out-of-synchronisation switching on to the bypass.

11. STANDARD FEATURES AND OPTION

Availability	
●	Factory-installed option
○	Available as option
STD	Standard feature

Features	MASTERYS BC+		Note
	10-15-20 kVA	30-40 kVA	
Battery Option			
Additional charger	●	●	
Communication Option			
ACS card <i>(Automatic Cross Synchronisation)</i>	●○	●○	
ADC+SL card <i>(Advanced Dry Contact + Serial Link)</i>	○	○	
Temperature sensor	○	○	ADC+SL card
Remote touchscreen display	○	○	ADC+SL card
BACnet card	○	○	
Modbus TCP card	○	○	
Net Vision card	○	○	
EMD <i>(Environmental Monitoring Device)</i>	○	○	Net Vision card
Electrical Option			
Parallel card	●○	●○	
External maintenance bypass	○	○	
Kit for TN-C / Neutral-Ground connection	○	○	
Internal Backfeed Protection	●	●	
Kit For Common Mains	STD (3/3)	○	
Kit For Separate Mains	STD (3/1) ● (3/3)	STD	
Mechanical Option			
Ramp for UPS unloading	○	○	
Kit for Front and Lateral Cover	○	○	
Kit for IP21	○	○	


Required option

11.1 ADC+SL CARD

The ADC+SL (Advanced Dry Contact + Serial Link) is a slot optional board that provides:

- 4 relays for external device activation (can be set as normally closed or normally open).
- 3 free inputs to report external contacts to UPS.
- 1 connector for external battery temperature sensor (optional).
- RS485 insulated serial link providing MODBUS RTU protocol.
- 2 LEDs indicating board status.

The board is plug&play: the UPS is able to recognise its presence and configuration (up to 4 standard operating modes can be selected by the display) and manages the ADC+SL outputs and the inputs accordingly. It is possible to create a custom operation mode through after sales service.

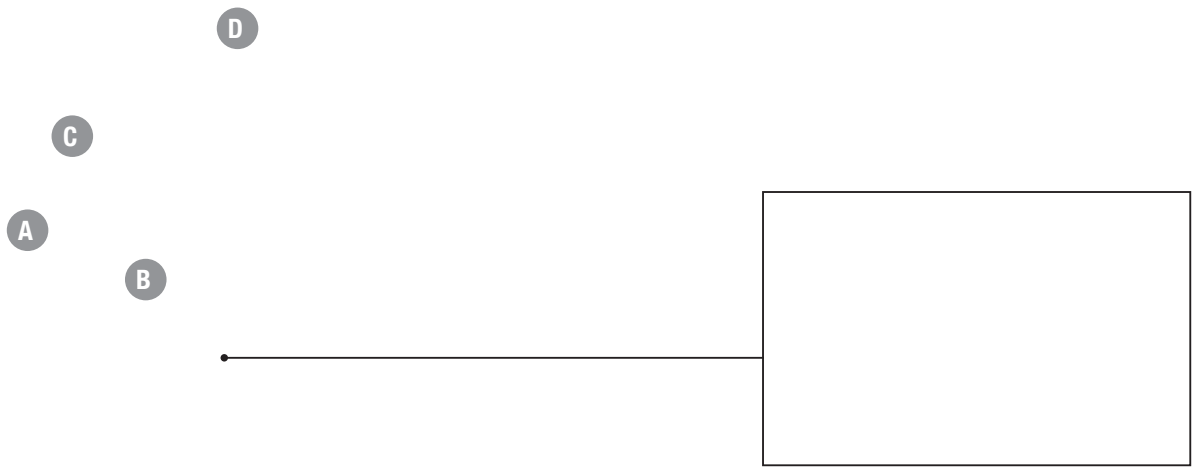

KEY

- | | |
|--|---|
| A 3 free inputs to link external contacts to UPS. | C 1 connector for external temperature sensor. |
| B 4 relays for external device activation. | D RS485 insulated serial link. |

NOTE! If the board is removed while operating, an alarm is flagged on the control panel. Perform an “Alarm reset” control to cancel it.
--

INPUT

- Free voltage loop.
- INx+ has to be connected to INx- to close the loop on **A** connector.
- Inputs must be isolated with basic insulation from a primary circuit up to 277 V.
- IN1 is duplicated, giving the possibility to link the UPS POWER OFF signal to other equipment, for example.

RELAY OUTPUTS

- Contact voltage guaranteed at 277 V (AC) / 25 V (DC) – 4 A (for higher voltage, please contact the manufacturer).
- Relay 1 gives the possibility of choosing between normally closed (NC1) or normally open (NO1) position. Relays 2, 3 and 4 only have normally open position (NOx).
- On connector **B**, Cx means common, NOx means normally open position.

Configuration 1			STANDARD configuration (default)		
IN/OUT	DESCRIPTION	ACTIVATION DELAY (s)	REMARK ⁽¹⁾	INPUT TYPE	STATE
IN1	UPS POWER OFF	1	Command sent to UPS ⁽²⁾	Close to activate	Normally open
IN2	GEN SET ON	1	Activate S023 status	Open to activate	Normally closed
IN3	INSULATION FAULT	10	Activate A026	Open to activate	Normally closed
RELAY 1	GENERAL ALARM	10	(NC1 or NO1 position can be chosen) Relating to A015		Normally open/closed
RELAY 2	OPERATING ON BATTERY	30	Relating to A019		Normally open
RELAY 3	END OF BACK-UP TIME	10	Relating to A017		Normally open
	IMMINENT STOP	10	Relating to A000		Normally open
RELAY 4	LOAD SUPPLIED BY AUTO-MATIC BYPASS	10	Relating to S002		Normally open

Configuration 2			OPTIONS SUPERVISOR configuration		
IN/OUT	DESCRIPTION	ACTIVATION DELAY (s)	REMARK ⁽¹⁾	INPUT TYPE	STATE
IN1	UPS POWER OFF	1	Command sent to UPS ⁽²⁾	Close to activate	Normally open
IN2	FAN FAILURE	10	Activate A054	Close to activate	Normally open
IN3	BATTERY DISCONNECTED	10	Activate A016	Open to activate	Normally closed
RELAY 1	GENERAL ALARM	10	(NC1 or NO1 position can be chosen) Relating to A015		Normally open/closed
RELAY 2	OPERATING ON BATTERY	30	Relating to A019		Normally open
RELAY 3	REDUNDANCY LOST	10	Relating to A006		Normally open
RELAY 4	BATTERY DISCONNECTED	1	Relating to A016		Normally open

Configuration 3			SAFETY configuration		
IN/OUT	DESCRIPTION	ACTIVATION DELAY (s)	REMARK ⁽¹⁾	INPUT TYPE	STATE
IN1	UPS POWER OFF	1	Command sent to UPS ⁽²⁾	Close to activate	Normally open
IN2	INSULATION FAULT	1	Activate A026	Open to activate	Normally closed
IN3	CHARGER DISABLE/ENABLE	10	Command sent to UPS ⁽²⁾	Open to activate	Normally closed
RELAY 1	GENERAL ALARM	10	(NC1 or NO1 position can be chosen) Relating to A015		Normally open/closed
RELAY 2	UPS POWER OFF	1	Relating to A059		Normally open
RELAY 3	END OF BACK-UP TIME	10	Relating to A017		Normally open
	IMMINENT STOP	10	Relating to A000		Normally open
RELAY 4	INSULATION FAULT	1	Relating to A026		Normally open

Configuration 4			ENVIRONMENTAL configuration		
IN/OUT	DESCRIPTION	ACTIVATION DELAY (s)	REMARK ⁽¹⁾	INPUT TYPE	STATE
IN1	UPS POWER OFF	1	Command sent to UPS ⁽²⁾	Close to activate	Normally open
IN2	PROGRAMMABLE ALARM	10	Activate A064	Open to activate	Normally closed
IN3	BATTERY TEMPERATURE ALARM	10	Activate A020	Open to activate	Normally closed
RELAY 1	GENERAL ALARM	10	(NC1 or NO1 position can be chosen) Relating to A015		Normally open/closed
RELAY 2	BATTERY TEMPERATURE ALARM	10	Relating to A020		Normally open
RELAY 3	REDUNDANCY LOST	10	Relating to A006 and A001		Normally open
RELAY 4	PROGRAMMABLE ALARM	10	Relating to A064		Normally open

Configuration 5			EXTERNAL MAINTENANCE BYPASS configuration		
IN/OUT	DESCRIPTION	ACTIVATION DELAY (s)	REMARK ⁽¹⁾	INPUT TYPE	STATE
IN1	UPS POWER OFF	1	Command sent to UPS ⁽²⁾	Close to activate	Normally open
IN2	GEN SET ON	1	Activate S023 status	Open to activate	Normally closed
IN3	EXTERNAL MAINTENANCE BYPASS CLOSED	10	Activate S018 status	Open to activate	Normally closed
RELAY 1	GENERAL ALARM	10	(NC1 or NO1 position can be chosen) Relating to A015		Normally open/closed
RELAY 2	OPERATING ON BATTERY	30	Relating to A019		Normally open
RELAY 3	END OF BACK-UP TIME	10	Relating to A017		Normally open
	IMMINENT STOP	10	Relating to A000		Normally open
RELAY 4	LOAD SUPPLIED BY AUTO-MATIC BYPASS	10	Relating to S002		Normally open

1. The acronyms mentioned are linked to MODBUS table (Snnn=Status/Annn=Alarm).

2. A self-locking emergency push button must be used for the UPS Power Off input.

Note: custom configuration is also available. For more information contact Socomec.

RS485 SERIAL LINK

- Insulated RS485, protected against over voltage. Only for local bus purposes; maximum ~500 m.
- Pull up and pull down line resistor XJ1 (failsafe biasing): jumper open by default.
- Possibility of fixing the RS485 cable to the board.
- Cable type required: twister pair cable + shield to connect to ground. (AWG 24, 0.2 mm² for example).

The INPUT and RELAYS are managed with information coming from the UPS.

NOTE!

Inputs and relays can be re-programmed depending on requirements.
Contact your SOCOMEC after-sales service to change Input/Output programming.

Information coming from inputs can be reported in the UPS database for display on the mimic panel and is accessible on the MODBUS table.

The UPS can manage up to two ADC+SL option cards. The cards can be re-programmed for other uses.

In this specific case, the 2 serial links (SLOT 1 and SLOT 2) are independent.

MODBUS SERIAL LINK

The RS485 provides MODBUS RTU protocol.

The description of MODBUS addresses and UPS database are described in the MODBUS user manual. All manuals are available on SOCOMEC's web site (www.socomec.com).

SERIAL LINK SETTINGS

COM1 relates to serial port on board in SLOT 1.

COM2 relates to serial port on board in SLOT 2.

Settings are available via the mimic panel to configure:

- Baud rate
- Parity
- MODBUS slave number

BOARD STATUS

Board presence is reported through status S064 for slot 1 and S065 for slot 2.

In the case of board failure, 'Option board alarm' (A062) occurs to prevent malfunctioning.

11.1.1 TEMPERATURE SENSOR

The temperature sensor can be used to monitor the battery temperature.

The ADC+SL card can be ordered with or without the temperature sensor in kit.

If the sensor is present, temperature values are available on MODBUS protocol.

11.2 NET VISION CARD

NET VISION is a communication and management interface designed for business networks. The UPS behaves exactly like a networked peripheral, it can be managed remotely, and allows the shutdown of network workstations.

NET VISION allows a direct interface between the UPS and LAN network avoiding dependence on the server and support SMTP, SNMP, DHCP and many other protocols. It interacts via the web browser.

11.2.1 EMD

EMD (Environmental Monitoring Device) is a device to be used in conjunction with the NET VISION interface and provides the following features:

- temperature and humidity measurements + dry contact inputs,
- alarm thresholds configurable via Web browser,
- notification of environmental alarm via email and SNMP traps.

11.3 ACS CARD

ACS (Automatic Cross Synchronisation) card is used to receive a synchronisation signal from an external source and manage it for the UPS where it is installed, and provide a synchronising signal, where requested, to another UPS.

11.4 MODBUS TCP CARD

With the MODBUS TCP card fitted in the options slot, the UPS can be monitored from remote stations using the appropriate protocol (MODBUS TCP - IDA).

11.5 BACNET CARD

With the BACnet card fitted in the options slot, the UPS can be monitored from remote stations using the appropriate protocol (BACnet - IDA).

11.6 REMOTE TOUCHSCREEN DISPLAY



NOTE!
Available only with ADC+SL option card.

11.7 SOFTWARE OPTION

Visit www.socomec.com and enter DOWNLOAD > SOFTWARE > UPS SOFTWARE to find the communication software suitable for your requirements.

NOTE!
Before performing any operations, check that the software is compatible with your UPS model.

11.8 INTERNAL BACKFEED PROTECTION

Internal backfeed protection for Mains and Aux Mains.
For further information contact SOCOMECC.


11.9 EXTERNAL MAINTENANCE BYPASS

The external maintenance bypass is designed to provide maximum system availability for critical equipment. It offers the possibility of transferring the load to an alternative power path allowing full isolation of the UPS. In this case the UPS can be turned off and removed without power interruption at the connected loads.
For further information contact SOCOMECC.

11.10 KIT FOR COMMON MAINS

WARNING!
Cabling errors with inversion between phase and neutral conductors may cause permanent damage to the equipment.

Details

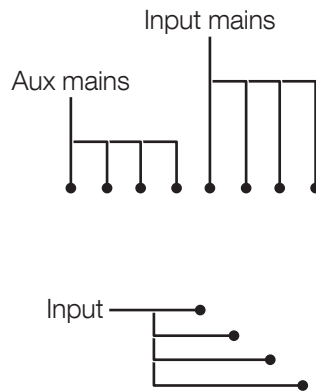

11.11 KIT FOR SEPARATE MAINS


WARNING!
Cabling errors with inversion between phase and neutral conductors may cause permanent damage to the equipment.

UPS kVA	Input/ Output phases	Battery type	Details
10-15-20	3/3	Internal battery	

11.12 KIT FOR TN-C / NEUTRAL-GROUND CONNECTION


To deal with different plant needs, a connection bar between Neutral and Protection Earth is available as an option (see figure). For further information contact SOCOMEC.

	<p>The UPS does not ensure continuity of the neutral conductor. The output neutral must not be used as a PEN connection for the load.</p>
	<p>A PEN conductor is prohibited in the case of unbalanced and third harmonic current circulation.</p>

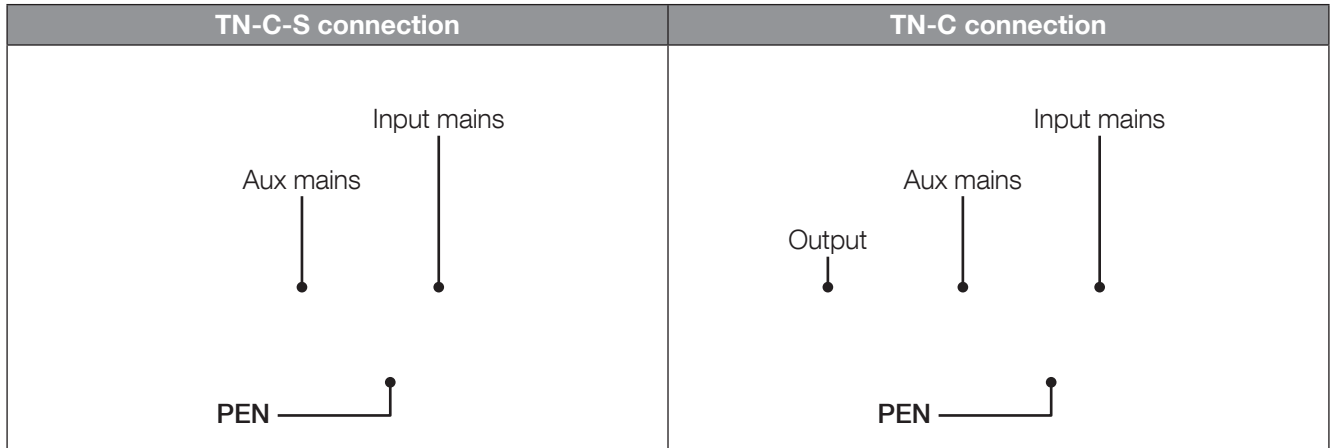

	<p>Use the same Neutral PEN section of the power connections.</p>
--	---

 11.13 RAMP FOR UPS UNLOADING



11.14 KIT FOR FRONT AND LATERAL COVER



12. TROUBLESHOOTING

The alarm messages displayed enable immediate diagnosis.

Alarms are divided into two categories:

- Alarms relating to external UPS circuits: input mains, output mains, temperature and environment.
- Alarms relating to internal UPS circuits: in this case corrective action will be carried out by the After Sales Department.

The USB report makes it possible to have full information on what occurred. Refer to 'Menu' chapter.

For other alarms that may appear please contact the Service Dept.

12.1 SYSTEM ALARMS

A000	IMMINENT STOP	An imminent stop is about to happen. In few minutes the UPS will be shut down. This can be caused by a critical alarm or a user request.
A001	OVERLOAD ALARM	The load is exceeding the UPS power specification. The machine will turn off. Reduce the load immediately.
A002	AMBIENT TEMPERATURE ALARM	Environmental temperature is greater than 65°C.
A003	TRANSFER LOCKED	The UPS is unable to transfer the load between bypass and inverter.
A004	TRANSFER IMPOSSIBLE	Bypass is not available.
A005	INSUFFICIENT RESOURCES	Some components are not operational.
A006	REDUNDANCY LOST	The redundant Unit is not available. Check individual unit alarms to locate which is excluded from the System.
A007	OUTPUT SHORT CIRCUIT DETECTION	A short circuit is detected on the output. Please contact the Service Dept.
A008	ECO MODE DISABLED BY UPS	Eco mode is disabled due to bypass failure.
A009	ENERGY SAVER DISABLED BY UPS	An event has occurred forcing the UPS to stop the energy saver function.
A012	MAINTENANCE ALARM	UPS needs routine maintenance. Please contact the Service Dept.
A013	REMOTE SERVICE ALARM	UPS needs immediate maintenance. Please contact the Service Dept.
A014	REMOTE SERVICE PREVENTIVE ALARM	A non-critical alarm is present. Please contact the Service Dept.
A015	GENERAL ALARM	An alarm is present.
A016	BATTERY DISCONNECTED	The battery is not connected to the UPS.
A017	BATTERY DISCHARGED	The battery charge level is below the minimum value.
A018	END OF BACK-UP TIME	Supply from batteries is close to finishing.
A019	OPERATING ON BATTERY	The UPS is running on battery. Load is supplied by batteries.
A020	BATTERY TEMPERATURE ALARM	Battery temperature is greater than the threshold. If temperature is measured using ADC+SL, verify NTC is still connected, otherwise, check the internal UPS temperature.
A021	BATTERY ROOM ALARM	The battery cabinet temperature is too high.
A022	BATTERY TEST FAILED	The battery has failed the last battery test.
A026	INSULATION FAULT	There is an insulation problem with the plant. Verify input from ADC+SL.
A027	BATTERY ALARM	A battery alarm is present. Maximum recharging time at two levels, or slow discharging time protection has occurred.
A032	RECTIFIER CRITICAL ALARM	There is a problem with the rectifier. Please contact the Service Dept.
A033	RECTIFIER PREVENTIVE ALARM	There is a non-critical problem with the rectifier. Check the fans are working properly. Please contact the Service Dept.

A035	RECTIFIER INPUT SUPPLY NOT OK	The input mains supply is out of tolerance. Verify that the input voltage and frequency are within the UPS ratings.
A037	CHARGER CRITICAL ALARM	There is a problem with the battery charger. Please contact the Service Dept.
A038	CHARGER PREVENTIVE ALARM	Battery charger was blocked by a critical alarm, or Battery Voltage is too low after 16 hours of charging.
A040	INVERTER CRITICAL ALARM	There is a problem with the inverter. Please contact the Service Dept.
A041	INVERTER PREVENTIVE ALARM	There is a non-critical problem with the inverter. Check the fans are working properly. Please contact the Service Dept.
A043	INVERTER IMMINENT STOP	Imminent redundancy was lost due to overload, unit imminent stop, etc.
A046	PARALLEL BOARD CRITICAL ALARM	There is a problem with the Parallel Board. Check the PowerLink connections, otherwise, please contact the Service Dept.
A047	PARALLEL BOARD PREVENTIVE ALARM	There is a non-critical problem with the Parallel Board. Check the Power Link connections, otherwise, please contact the Service Dept.
A048	BYPASS CRITICAL ALARM	There is a problem with the bypass. Please contact the Service Dept.
A049	BYPASS PREVENTIVE ALARM	There is a non-critical problem with the bypass. Please contact the Service Dept.
A050	BYPASS INPUT SUPPLY NOT OK	The auxiliary supply is out of tolerance. Verify that the input voltage and frequency are within the UPS ratings.
A051	PHASE ROTATION FAULT	The auxiliary mains is not connected properly. Please check phase connection order is correct.
A052	BYPASS BACK-FEED DETECTION	There is a backfeed problem with the bypass. Please contact the Service Dept.
A054	FAN FAILURE	Fan Failure can generate overheating. Please contact the Service Dept.
A055	ACS ALARM	Communication between ACS and Inverter is lost.
A056	MAINTENANCE BYPASS ALARM	Output and Maintenance ByPass switches are closed at the same time.
A057	INTERNAL BACKFEED DETECTION	There is a backfeed problem with the rectifier. Please contact the Service Dept.
A059	UPS POWER OFF	The UPO emergency input on ADC+SL has been activated.
A060	WRONG CONFIGURATION	UPS is not configured properly. Please check the configurations or contact the Service Dept.
A061	INTERNAL / COMMUNICATION FAILURE	The internal communication between UPS sub-system is lost. Please contact the Service Dept.
A062	OPTION BOARD ALARM	There is a communication problem with the option board. Please contact the Service Dept.
A063	SPARE PARTS NOT COMPATIBLE	Spare parts are not registered on the UPS or are not compatible.

12.2 SYSTEM STATUS

S002	LOAD SUPPLIED BY AUTOMATIC BYPASS	Load on bypass, supplied by auxiliary mains. Load not protected.
S018	EXTERNAL MAINTENANCE BYPASS CLOSED	External maintenance bypass input is closed.
S023	GEN SET ON	Genset input.
S064	CARD IN SLOT 1 PRESENT	
S065	CARD IN SLOT 2 PRESENT	

13. PREVENTIVE MAINTENANCE

	NOTE: before carrying out any operations on the unit read the 'Safety standards' chapter carefully.
	NOTE: any work carried out on the equipment must be performed by qualified technicians authorised by SOCOMEC.

Routine maintenance carried out annually is recommended in order to provide optimum operating efficiency and avoid equipment downtime.

Maintenance consists of thorough functionality checks on:

- electronic and mechanical parts;
- dust removal;
- battery inspection;
- software updating;
- environmental checks.

13.1 BATTERIES

The condition of the battery is fundamental to UPS operation.

During the operating lifetime of the battery, the UPS stores statistics on the conditions of use of the battery for analysis.

Expected battery lifetime is very much dependent on operating conditions:

- number of charging and discharging cycles;
- load rate;
- temperature.

	NOTE: batteries must only be replaced with batteries recommended or sold by the manufacturer. Batteries must only be replaced by qualified technicians.
	NOTE: used batteries must be placed in appropriate containers to avoid acid leakage. They should only be entrusted to a specialist waste disposal company.
	CAUTION: Do not dispose of batteries in a fire. The batteries may explode. Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic. A battery can present a risk of electric shock and burns by high short-circuit current. Failed batteries can reach temperatures that exceed the burn thresholds for touchable surfaces.
	NOTE: servicing of batteries should be performed or supervised by personnel knowledgeable about batteries and required precautions.
	NOTE: when replacing batteries, replace with the same type and number of batteries or battery packs.

13.2 FANS & CAPACITORS

The lifespan of consumable parts such as fans and capacitors (AC and DC) depends on whether or not the use and environmental conditions (premises, usage or load type) are abnormal or harsh for the equipment.

It is advisable to replace consumables as follows⁽¹⁾:

Consumable part	Years
Fan	5
AC and DC capacitor	7

1. Based on operation of the unit according to the manufacturer's specification.

14. SAFEGUARDING THE ENVIRONMENT

Do not dispose of electrical appliances with normal waste, use separate collection facilities.

Follow local council waste regulations for proper disposal arrangements to reduce the environmental impact of waste electrical and electronic equipment or contact your local government for information regarding the collection arrangements available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging health and wellbeing. Depleted batteries are considered as toxic waste. When battery replacement becomes necessary, only give rundown batteries to certified and licensed waste disposal companies. In accordance with local legislation, it is prohibited to dispose of batteries together with other industrial waste or household refuse.

The crossed-out trash bin symbol is placed on this product to encourage users to recycle components and units whenever possible. Please be environmentally responsible and recycle this product through your recycling facility at the end of its lifetime.

For any questions regarding the disposal of the product, contact local distributors or retailers.

15. TECHNICAL SPECIFICATIONS

Models		MASTERYS BC+					
		10 kVA	15 kVA	20 kVA	30 kVA	40 kVA	
Input/Output phases	kVA	3/1 and 3/3			3/3		
Electrical specifications - Input							
Mains voltage	Vin	3ph + N 400 Vac (-15/+20%) up to -40% @ 70% of nominal load					
Input frequency	Hz	50-60 ±10%					
Input power factor		≥ 0.99					
Current distortion (THDi)		≤ 4%	≤ 3.5%	≤ 2%			
(@: Pn, Resistive load, Mains THDv ≤ 1%)							
Electrical specifications - Output							
Output voltage	V	1Ph+N 220/230/240 V ±1% 3Ph+N 380/400/415 V ±1% ⁽¹⁾			3Ph+N 380/400/415 V ±1% ⁽¹⁾		
Output frequency	Hz	50-60 Hz (selectable) ±0.01%					
Nominal apparent power	kVA	10	15	20	30	40	
Nominal active power	kW	9	13,5	18	27	36	
Overload (@ 25 °C; Vin > 380) ⁽²⁾	10 minutes	kW	11.25	16.875	22.5	33.75	45
	1 minute		13.5	20.25	27	40.5	54
Crest factor		≥ 2.7					
Voltage distortion (THDv)		≤ 1% (@: Pn, Resistive load) ≤ 5% (@: Sn, non-linear load)					
Electrical specifications - Bypass							
Bypass input voltage	V	Nominal output voltage ±15% (±20% if GENSET is used)					
Bypass input frequency	Hz	50-60 ±2% selectable (±8% if GENSET is used)					
Environment							
Operating temperature	°C	0-35 (15-25 recommended)					
Storage temperature	°C	-5 to 50					
Relative humidity	%	up to 95% (condensation-free)					
Max. altitude	m	1000 (without derating)					
Acoustic noise (@ 70% Pn)	dB(A)	< 49				< 51	
Cooling type		Air cooling					
Required cooling capacity	m ³ /h	240				360	
Dissipated power max at Pn nominal condition	W	450	700	900	1400	1900	
	kcal/h	387	602	774	1204	1634	
	BTU/h	1535	2388	3071	4777	6483	
Dissipated power max at Pn worst condition	W	550	800	1000	1600	2100	
	kcal/h	473	688	860	1376	1806	
	BTU/h	1877	2730	3412	5459	7165	
Standards							
Safety		EN 62040-1/A1, EN 60950-1					
Type and performance		EN 62040-3 (VFI-SS-111)					
EMC		EN 62040-2					
Product certification		CE					
Protective class		Protective Class I					
Touch current		< 1 mA					
Protection level		IP20; IP21 (option)					

Models				MASTERYS BC+				
				10 kVA	15 kVA	20 kVA	30 kVA	40 kVA
Mechanical characteristics								
Colour					External panel: RAL 7016 Front panel: Metallized grey			
Models	S	Dimensions	Width	mm	444			
			Depth	mm	800			
			Height	mm	800			
		Weight			kg	98 ÷ 291		
	M	Dimensions	Width	mm	444			
			Depth	mm	800			
			Height	mm	1400			
		Weight			kg	139 ÷ 613		

1. 360 V with $P_{out} = 90\% P_n$.
2. Initial Condition $P_{out} \leq 80\% P_n$.
3. @ Battery Fully Discharged. Call SOCOMEC support service.
4. @ Battery Fully Charged. Call SOCOMEC support service.



IOMMASBCXOG-EN 00 06.2019